USER'S MANUAL

NAVIGATION

DODGE

CHRYSLER

Jeep®

MOPAR®

RER

VEHICLES SOLD IN CANADA

With respect to any Vehicles Sold in Canada, the name Chrysler LLC shall be deemed to be deleted and the name Chrysler Canada Inc. used in substitution therefor.

DRIVING AND ALCOHOL

Drunken driving is one of the most frequent causes of accidents.

Your driving ability can be seriously impaired with blood alcohol levels far below the legal minimum. If you are drinking, don't drive. Ride with a designated non-drinking driver, call a cab, a friend, or use public transportation.

WARNING!

Driving after drinking can lead to an accident. Your perceptions are less sharp, your reflexes are slower, and your judgment is impaired when you have been drinking. Never drink and then drive.

This manual illustrates and describes the operation of features and equipment that are either standard or optional on this vehicle. This manual may also include a description of features and equipment that are no longer available or were not ordered on this vehicle. Please disregard any features and equipment described in this manual that are not on this vehicle.

Chrysler LLC reserves the right to make changes in design and specifications, and/or make additions to or improvements to its products without imposing any obligation upon itself to install them on products previously manufactured.

Copyright © 2008 Chrysler LLC

NAVIGATION

CONTENTS

■ Safety Guidelines 4
■ Introduction 5
□ Warnings 5
□ Safety References 5
□ Intended Use 5
□ System Care 6
■ General Handling 9
□ User Interface Elements 9
□ Steering Wheel Mounted Controls 12
□ Audio Settings 13
■ Getting Started 15
□ Disclaimer 15
■ Radio 24
□ Radio Mode 24
□ Radio Settings 29
■ Media 37
□ Disc Changer Mode 37
□ Hard Disk Drive Mode (HDD) 49

■ Remote Devices 84
□ Sirius Backseat TV™ (If Equipped) 84
□ Video Entertainment System (VES)™ 86
□ USB Connector 94
□ AUX Mode 96
■ Speech Dialogue System 98
□ Voice Recognition System (VR) 98
■ Hands Free Communication (UConnect®) (If Equipped) 108
□ UConnect® 108
□ Advanced Phone Connectivity 125
■ Navigation 132
□ General Notes 132
□ Navigation Main Menu 133
□ Destination Input 137
□ Route Guidance 171
□ Navigation Settings 183
□ Map Viewer 187
□ Stop Over Destinations 189
□ Trip Planner 190
□ Realtime Traffic By Sirius Satellite Radio 196
□ Address Book 200
■ System Information 205
□ Data Backup And Updates 205
■ Troubleshooting 205
□ Radio 205

- Disc 206
- HDD 206
- Navigation 206
- Navigation Map 206
- Voice Recognition 207
- UConnect® 207

Glossary Of Terms 207

SAFETY GUIDELINES

Ensure that all persons read this manual carefully before using the navigation system. It contains instructions on how to use the system in a safe and effective manner.

WARNING!

Please read and follow these safety precautions. Failure to do so may result in injury or property damage.

- When using the navigation system to route you to an emergency facility, contact the facility to verify its location.
- Not all emergency service locations are contained in the database. Please use your own judgement and ask for directions in such situations.
- Glance at the screen only when necessary and safe to do so. If prolonged viewing of the screen is necessary pull over at a safe location.
- Road conditions and regulations take precedence over information contained on the map display. Observe actual traffic restrictions and circumstances when driving.
- Stop use immediately if problem occurs. Failure to do so may cause injury or damage to the product. Return it to your authorized Chrysler dealer to repair.
- There may be situations where the navigation system erroneously displays the vehicles location. Use your own driving judgement in this situation, taking into account current driving conditions. Please be aware that in this situation the navigation system should automatically correct the vehicle position within a few minutes.

- Make certain that the volume level of the system is set to a level that still allows you to hear outside traffic and emergency vehicles.
- The map database is designed to provide you with route suggestions and does not take into account the relative safety of suggested route or factors that may affect the time required to reach your destination. Use your own personal judgement if the navigation system is unable to provide you with an alternative route.

INTRODUCTION

Warnings

This manual contains WARNINGS against operating procedures that could result in an accident or bodily injury. If you do not read the entire manual you may miss important information. Observe all warnings!

The information given in this manual is subject to change.

Safety References

Before operating this navigation system for the first time, please read this manual carefully. Note the safety precautions described in this manual. If you have any questions, please contact the vehicle manufacturer.

Intended Use

Generally recognized rules of navigation technology were maintained during the development and manufacture of the REU radio navigation system. When using this product, be aware of state-specific norms and guidelines.

Visit http://www.chrysler.com/mygig/ for updates, additional information, compatible phones, etc.

System Care

Software Update

Both navigation data and Gracenote® data are software updatable. Visit http://www.chrysler.com/mygig/ or contact your Chrysler Dealership for the latest available software.

Safe Usage of the Radio Navigation System

Read all instructions in this manual carefully before using your radio system to ensure proper usage!

Your radio is not a toy. Do not let young children use your radio unsupervised.

Permanent hearing loss may occur if you play your music at the highest volumes. Exercise caution when setting the volume on your radio.

Driving is a complex activity that requires your full attention. If you're engaged in driving or any activity that requires your full attention, we recommend that you not use your radio.

NOTE: Many features of this radio are speed dependent. For your own safety it is not possible to use the press screen keyboard to enter a name (e.g., street name), while the vehicle is in motion.

Keep drinks, rain, and other sources of moisture away from your radio. Besides damage to your radio, moisture can cause electric shocks with any electronic device.

NOTE: In a convertible vehicle, the system performance may be compromised with roof top down.

Connections

Never force any connector into the ports of your radio. Make sure your connectors are the correct shape and size before you connect.

Any attached cable should be routed so that it will not apply any pressure to the connection.

Do not use a USB device which will interfere with the operation of opening the display.

Screen

Do not touch the screen with any hard or sharp objects, which could scratch the touch screen surface! (pen, USB stick, jewelry, etc.)

Do not spray any liquid or caustic chemicals directly on the screen! Use a clean and dry micro fiber lens cleaning cloth in order to clean the touch screen.

If necessary, use a lint-free cloth dampened with cleaning solution, such as isopropyl alcohol, or an isopropyl alcohol and water solution ratio of 50:50. Be sure to follow solvent manufacturer's precautions and directions.

CD/DVD Drive

Do not insert any damaged, warped, scratched or dirty CD's or DVD's into the CD/DVD player.

Do not insert any CD or DVD that has a peeled off label on it.

Discs that have been modified with an adhesive label should not be used in the CD/DVD player.

Do not insert more than 1 (one) CD/DVD at a time into the drive slot.

Do not insert anything other than the supported CD/DVD formats. See **Disc Mode** section for information on supported CD/DVD formats.

GPS Navigation Antenna

The antenna for the navigation GPS system is mounted in various locations (depending on the vehicle model) within the dashboard. Do not place items on the dashboard around the GPS antenna location. Objects placed within the line of sight of the antenna will decrease performance. Do not place items directly on or above the antenna.

Satellite Antenna

The antenna for the satellite radio and SIRIUS Satellite Backseat TV™, if equipped, is mounted on the roof of the vehicles. Do not place items on the roof around the rooftop antenna location. Objects placed within the line of sight of the antenna will cause decreased performance. Larger luggage items should be placed as far forward as possible. Do not place items directly on or above the antenna.

Other Electronic Devices

You may bring other electronic devices into your vehicle (e.g., PDA, iPod, laptop computer, etc.) Some of these devices may cause electromagnetic interference with the GPS. If a degradation in the navigation is observed, turn the devices off, or keep them as far away from the GPS antenna as possible.

GENERAL HANDLING

User Interface Elements

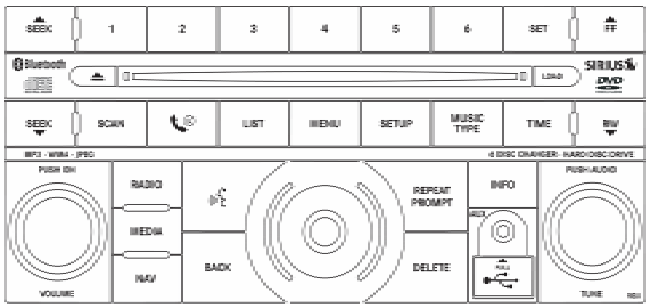

Power to operate the navigation radio is supplied through the ignition switch, which must be in the ON, ACC or in ACC Delay mode in order to operate the navigation radio.

(1) ON/OFF VOLUME knob It is also possible to set the unit in standby mode during driving, by pressing the ON / OFF VOLUME rotary knob.

NOTE: If the ignition is switched off with the radio in standby mode, the radio memorizes the standby state when the ignition is switched on again. Press the ON / OFF VOLUME rotary knob to switch the radio on. The navigation software is always working when the ignition is switched on, even if the radio is in standby mode. It is possible to eject the CD and to display the time if the unit is switched off.

(2) CENTER CONTROL knob Rotate the CENTER CONTROL knob to highlight menu items.

Move the joystick to change menu values or to move the cursor on the screen. Press the joystick to select highlighted menu items.

(3) AUDIO/TUNE knob Rotate the TUNE knob to change stations in AM, FM, SAT or SATV mode. Push the knob to access the audio control menu.

EJECT To eject a disc, press EJECT and select the desired slot with buttons 1-6.

After pressing the EJECT button it takes a few seconds to eject a CD/DVD, if one was in the slot.

LOAD To load a disc, press LOAD and select the desired slot with buttons 1-6.

When inserting a disc, make sure the label is facing up.

NOTE: It may take several seconds to recognize the type of inserted disc (CD, DVD, MP3, etc.).

SEEK UP/SEEK DOWN Press the SEEK up and the SEEK down button to seek through radio stations in AM, FM, or SAT bands. Seek through tracks in CD or jukebox modes or through songs in the HDD playlist.

FF/RW Press the FF and the RW button to fast forward or fast rewind tracks in CD modes or through songs in the HDD playlist.

SCAN Press the SCAN button to scan through AM, FM, SAT stations or tracks in CD modes or through songs in the HDD playlist.

UConnect® Press the UConnect® button to either activate the UConnect® system or to cancel an active phone call.

NOTE: If you are in one of the navigation menus (NAV menu, MAP display, etc.), you need to press the UConnect® button twice to end an active call.

LIST Press the LIST button to display a list of available tracks, or stations. Move the joystick to the left to switch the list to full screen mode, or move the joystick to the right to switch to split screen mode.

MENU Press the MENU button in order to change mode specific settings.

SETUP Press the SETUP button to access the systems setup menu.

MUSIC TYPE Press the MUSIC TYPE button to enable/disable certain program types.

TIME Press the TIME button to display the current time.

NOTE: Press and hold the TIME button to access the time settings menu.

RADIO Press the RADIO button to toggle between RADIO modes AM, FM, SAT, SATV.

MEDIA Press the MEDIA button to toggle between MEDIA modes HDD, DISC, AUX, VES.

NAV Press the NAV button either to switch to the navigation mode or to toggle between the navigation menu and the map viewer menu.

VR Press the VR button and wait for the confirmation beep before you say a voice command.

BACK Press the BACK button to get to the previous screen.

REPEAT PROMPT Press the REPEAT PROMPT button to hear the current navigation announcement.

DELETE Press the DELETE button to delete items at the current cursor position on the screen. E.g. characters in name spellers.

INFO Press the INFO button to display additional information for the current screen display. E.g. navigation route info, song info, etc.

AUX Connector Connect an external audio device into the AUX Input (e.g., MP3 player, video-game), to play the device audio through the car audio system.

USB Connector Connect a supported device into the USB Connector in order to copy files to the internal hard disk drive.

NOTE: See USB Connector section for information on supported devices.

Electronic Vehicle Information Center (EVIC) Some vehicles feature an Electronic Vehicle Information Center (EVIC) with driver-interactive display. The EVIC is normally located in the instrument cluster or overhead. It can display radio station preset frequencies, CD disc number, satellite radio channel, and navigation system information.

Steering Wheel Mounted Controls

The remote sound system controls are located on the surface of the steering wheel. Please refer to the vehicle specific owner's manual for detailed information.

The following describes general steering wheel functionality:

1. The VOLUME switch controls the volume of the sound system. Pressing the top of the rocker switch will increase the volume and pressing the bottom of the rocker switch will decrease the volume.

2. The MODE ADVANCED switch changes the mode of the navigation radio between the various modes available (FM, AM, CD, DVD, SAT, SATV, NAV etc.). To switch to the navigation mode, push and hold the switch. To leave the navigation mode, push the switch momentarily.

3. The FUNCTION SELECT switch advances the navigation radio to the next preset, changes the current disc when in disc mode, etc. The function is different depending upon which mode is in use.

4. The SCROLL switch changes selections such as radio station, CD track, and satellite radio channel, depending upon the current mode.

The following describes the operation of the SCROLL switch in each mode:

AM/FM/SAT Operation
Pressing the top of the switch will seek up for the next available station and pressing the bottom of the switch will seek down for the next available station.

HDD/Disc Operation
Pressing the top of the switch will go to the next track on the disc, and pressing the bottom of the switch will go to the beginning of the current track, or to the beginning of the previous track, if it is within eight seconds of the start of the current track.

Video Entertainment System™ Operation
If equipped with a remote video player, this control will function the same way as in disc mode.

SIRIUS Backseat TV™ Operation
If equipped with a SIRIUS Backseat TV™, this control will function the same way as in Sirius Satellite Radio mode.

Audio Settings

Volume
Use the ON/OFF VOLUME rotary knob to adjust the volume of the currently playing audio source. While you adjust the volume, a volume indicator is displayed in the lower left corner of the display.

Audio Control Menu

Press the AUDIO/TUNE rotary knob on the right side of the radio to access the Audio Controls menu.

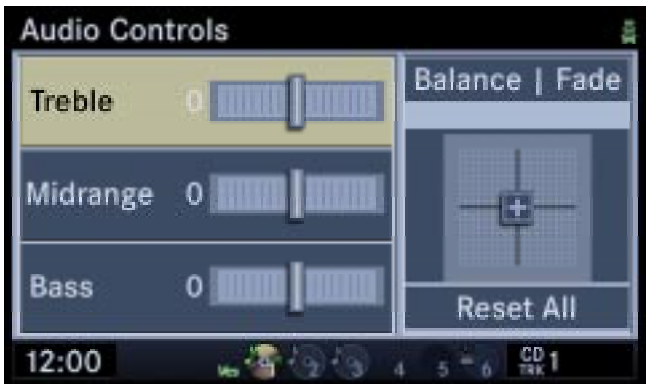

Use either the CENTER CONTROL knob (2) to highlight one of the following functions:

Treble — Press the JOYSTICK, and then turn the CENTER CONTROL knob to adjust the treble. Press the JOYSTICK again to exit the adjust mode.

Midrange — Press the JOYSTICK, and then turn the CENTER CONTROL knob (2) to adjust the midrange. Press the JOYSTICK again to exit the adjust mode.

Bass — Press the JOYSTICK, and then turn the CENTER CONTROL knob to adjust the bass. Press the JOYSTICK again to exit the adjust mode.

Balance / Fade — Press the JOYSTICK, and then use the JOYSTICK to move the cross-hair to the desired position. Press the JOYSTICK again to exit the adjust mode.

Reset All — Press the JOYSTICK to reset all audio controls.

Press the BACK button or press the Audio Control button to return to the previous screen.

GETTING STARTED

NOTE: The ignition switch must be in the ON or ACC position to operate the navigation radio.

If the unit is off, switch it on using the ON / OFF Volume rotary knob (1).

Disclaimer

Disclaimer for Navigation Radio

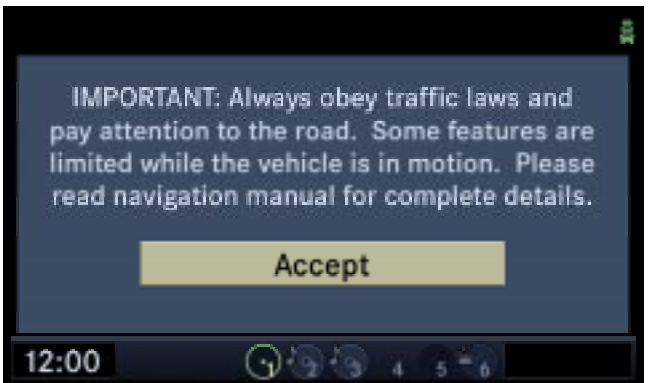
IMPORTANT: Always obey traffic laws and pay attention to the road. Some features are limited while the vehicle is in motion. Please read navigation manual for complete details.
Accept
12:00

Before using the navigation radio read and accept the disclaimer. The disclaimer will be activated after the ignition is turned on. Press the JOYSTICK to accept the disclaimer.

Change the Language

The navigation radio will conform to the vehicle language set in the ELECTRONIC VEHICLE INFORMATION CENTER (EVIC), if equipped.

If you change the language in the navigation radio, the vehicle will change the language for all display information. Refer to the vehicles owner's manual.

To change the language with the navigation radio:

1. Press the SETUP button.

2. Turn the CENTER CONTROL knob until Language Settings is highlighted in the Setup menu.

3. Press the JOYSTICK to select the Language Settings menu.

4. Turn the CENTER CONTROL knob until the desired language is highlighted.

5. Press the JOYSTICK to select the highlighted language.

6. Turn the CENTER CONTROL knob until YES is highlighted.

7. Press the JOYSTICK to confirm the language change.

NOTE: The check-mark indicates the currently active language.

Set the Time
GPS Time

1. Press and hold the TIME button.

NOTE: The check-mark indicates the currently active time base.

The minutes are set by the GPS system.

2. Turn the CENTER CONTROL knob until Time Zone is highlighted.

3. Press the JOYSTICK to select Time Zone.

NOTE: The check—mark indicates the currently active time zone setting.

4. Turn the CENTER CONTROL knob until the desired time zone is highlighted.

5. Press the JOYSTICK to select the highlighted time zone.

Daylight Savings

1. Turn the CENTER CONTROL knob until Daylight Savings is highlighted.

2. Press the JOYSTICK to select the Daylight Savings menu.

NOTE: The check—mark indicates the currently active setting.

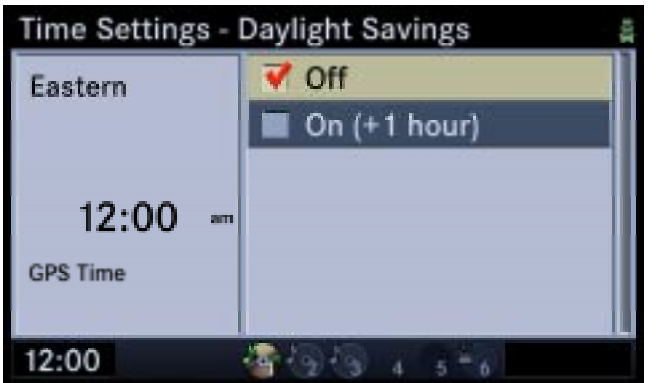

3. Turn the CENTER CONTROL knob to highlight either On or Off.

4. Press the JOYSTICK to select the desired setting.

User Time
It is possible to set up you own time (ahead or behind actual GPS time).

Set Hours

1. Turn the CENTER CONTROL knob until User Time is highlighted.

2. Press the JOYSTICK to select the User Time option.

NOTE: The check-mark indicates the currently active setting.

3. Turn the CENTER CONTROL knob to highlight Set Hours.

4. Press the JOYSTICK to select the desired setting.

5. Turn the CENTER CONTROL knob to adjust the hours.

6. Press the JOYSTICK again.

Set Minutes

1. Turn the CENTER CONTROL knob to highlight Set Minutes.

2. Press the JOYSTICK to select the desired setting

3. Turn the CENTER CONTROL knob to adjust the minutes.

4. Press the JOYSTICK again.

Store Radio Presets

1. Press the RADIO button to select a radio band.

2. Press the RADIO button repeatedly until the desired band is selected.

3. Either press the SEEK up / down buttons, or the SCAN button, or rotate the TUNE knob to change the currently playing station.

4. To access preset 1–6 press the SET button once followed by a preset button (1–6). To access preset 7–12 press the SET button twice followed by preset button (1–6).

Select Radio Presets

1. Press the RADIO button to select a radio band.

2. Press the RADIO button repeatedly until the desired band is selected.

3. To access preset 1–6 press one of the preset buttons (1–6). To access preset 7–12 press one of the preset buttons (1–6) twice.

Connect Bluetooth Phone

1. Press the SETUP button.

2. Turn the CENTER CONTROL knob until Phone Pairing is highlighted

3. Press the JOYSTICK to select the Phone Pairing menu.

4. Turn the CENTER CONTROL knob until Pair New Phone is highlighted.

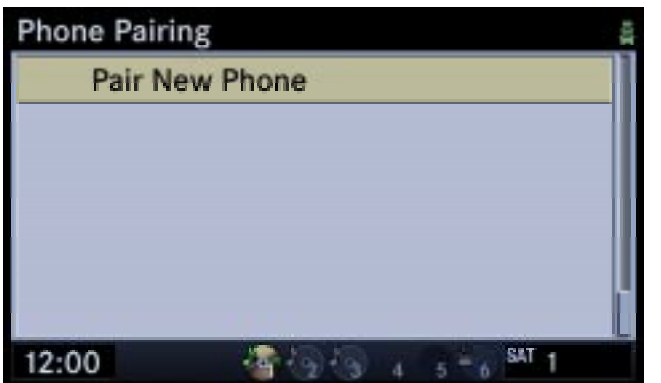

5. Press the JOYSTICK to select Pair New Phone.

You need to input a 4 digit PIN number (The same 4 digit pin number must be entered in your phone too. Refer to the user's manual of your phone.)

6. Turn the CENTER CONTROL knob until a digit is highlighted

7. Press the JOYSTICK to confirm the digit.

8. Press the DELETE button to delete single digits.

9. Enter all four digits until CONTINUE is highlighted.

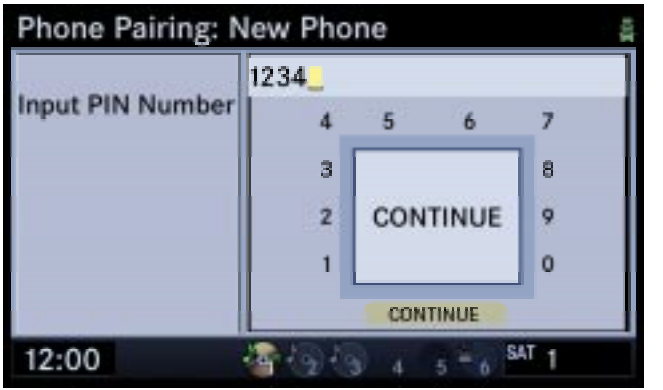

10. Press the JOYSTICK and start the pairing procedure on the phone.

11. Refer to the user's manual of your phone to complete the procedure.

Enter Home Address

1. Press the NAV button. If the radio does not display the NAV - Main Menu, press the NAV button again.

2. Turn the CENTER CONTROL knob until Guide Me Home is highlighted.

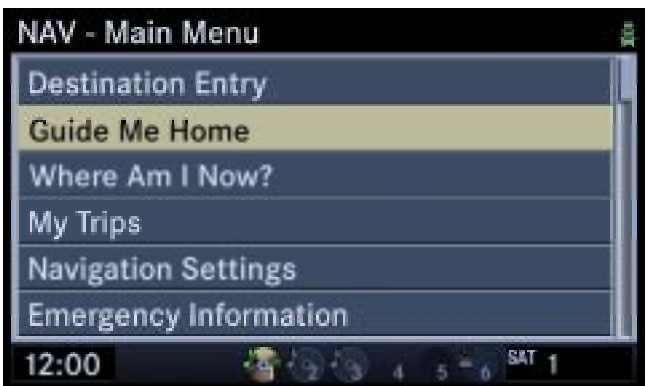

3. Press the JOYSTICK to select Guide Me Home.

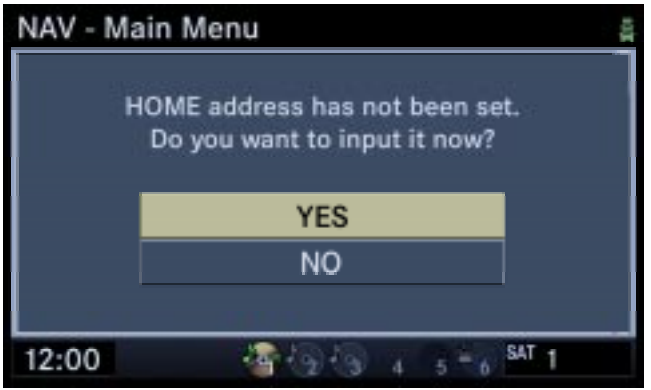

NOTE: The following steps are different, if the home address has been set already. Refer to Address Book for more information.

4. Turn the CENTER CONTROL knob until YES is highlighted.

5. Press the JOYSTICK to access the Enter Home Address menu.

6. Select Street Address and confirm to enter your address.

NOTE: Read more about destination input and the predictive speller in the Navigation section of this manual.

7. Change the country if necessary.

8. Change the state or province, if necessary.

9. Select Input Street Name and press the JOYSTICK to confirm.

10. Enter the street name and confirm CONTINUE.

11. Either input a house number or confirm CONTINUE.

12. Confirm OK to set your Home Address.

After you have entered your home address, the system will start a route guidance to your home every time you confirm the Guide Me Home selection in the Navigation-Main Menu.

Speech Dialogue System Tutorial
When you press the VR button, you will hear a beep. The beep is your signal to give a command. Say TUTORIAL to listen to a speech dialogue system tutorial.

Press any button to cancel the tutorial.

UConnect® Tutorial
When you press the UConnect® button, you will hear a beep. The beep is your signal to give a command. Say TUTORIAL to listen to a UConnect® system tutorial.

Press any button to cancel the tutorial.

RADIO

Radio Mode

Overview
The REU navigation radio is equipped with 4 different tuners:

- FM 87.7 MHz - 107.9 MHz (RBDS capable)
- AM 530 kHz - 1710 kHz
- SAT Sirius Satellite Radio (over 130 channels)
- SATV SIRIUS Backseat TV™ if equipped

Toggle between the radio bands by pressing the RADIO button.

Satellite Radio Mode

In order to receive satellite radio, the vehicle needs to be outside with a clear view to the sky. If the screen shows Acquiring Signal, you might have to change the vehicle position in order to receive a signal. In most cases, the satellite radio does not receive a signal in underground parking garages or tunnels.

Station Presets

There are 12 station presets available for storing the radio stations in each tuner range.

Display Radio Preset List in SAT

1. Press the MENU button while in SAT mode.
2. Turn the CENTER CONTROL knob until Presets List is highlighted

3. Press the JOYSTICK to mark the selection.

NOTE: The check-mark indicates that the preset list is available. If the check-mark is already selected press the MENU button again.

Display Radio Preset List in AM, FM

1. Press the LIST button while in AM or FM mode.

Store Radio Presets
To access preset 1-6 press the SET button once followed by a preset button (1-6).

To access preset 7-12 press the SET button twice followed by a preset button (1-6).

Select Radio Presets
To access preset 1-6 press one of the preset buttons (1-6) once.

To access preset 7-12 press one of the preset buttons (1-6) twice.

Change a Channel or Frequency
Press the SEEK up or the SEEK down button to play the next available station or channel.

Turn the TUNE knob (3) to step manually through the frequency or channel roster.

Press SCAN for a five second preview of each listenable station in the frequency band. Touch the SCAN button again to stop the scan function and to select a radio station.

RBDS (Radio Broadcasting Data System)
This radio navigation system is capable of receiving RBDS signals in the FM band. RBDS is a technology used for transmitting textual information about the music type, song and artist for FM band music. This information is shown on the display.

NOTE: Not all radio stations support RBDS.

The RBDS information is displayed above the frequency reading of the currently playing radio station.

Radio Text Information
Press the INFO button to display additional radio text information in the right half of the screen (FM and SAT only).

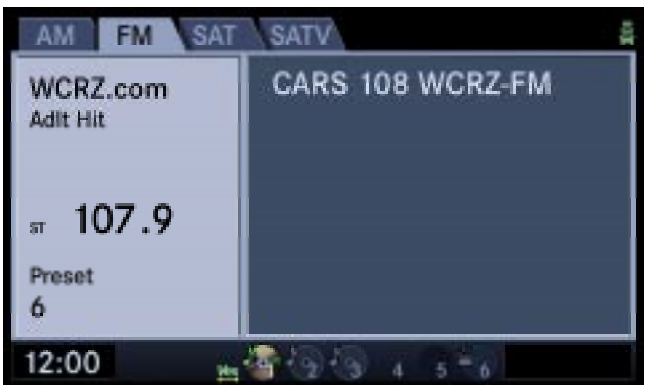

Press the INFO button again to hide additional radio text information.

MUSIC TYPE (Program Type Filter)

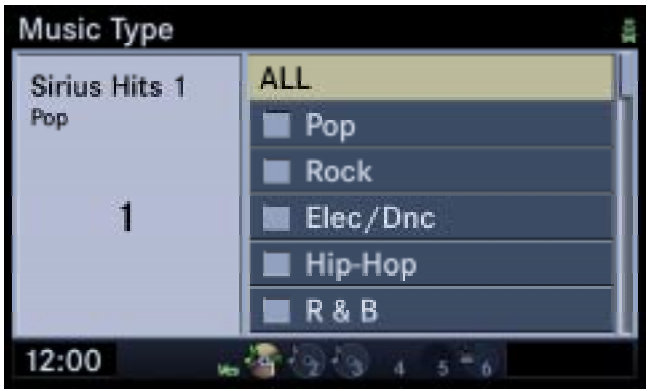

Program Type (PTY) is only available in FM and SAT mode. Radio stations are grouped according to their program (e.g., Soft Rock, Rhythm & Blues, etc.).

Press the MUSIC TYPE button to enable and/or disable desired program types. The SEEK and SCAN function will then only display stations with matching program types. If you close MUSIC TYPE, then your selection will not be considered for SEEK and SCAN.

RBDS (FM) Program Types

Adult Hits, Classic Rock, Classical, College, Country, Information, Jazz, Language, News, Nostalgia, Oldies, Personality, Public, Religious Music, Religious Talk, Rhythm and Blues, Rock, Soft, Soft Rhythm and Blues, Soft Rock, Sports, Talk, Top 40, Weather.

Sirius Satellite Radio Program Types

Pop, Rock, Electronic/Dance, Hip-Hop, R&B, Country, Christian, Jazz&Blues, Standards, Classical, Latin, International, Talk, Political Talk, Comedy, Entertainment, Howard Stern, Martha Stewart, Family&Kids, Sports Talk&News, College, NFL, NBA, NHL, More Sports, Soccer, NASCAR, Financial News, US News, International News, Public Radio, Traffic&Weather, Religion.

You can find Sirius' current terms and conditions at http://www.sirius.com

Radio Settings

While in radio mode press the MENU button to display the radio menu.

AM / FM MENU

There are no specific settings for this mode.

SAT MENU

Channel vs. Preset List Selection

Select Preset List to display only user presets on the right side of the Sirius Satellite Radio screen.

1. Press the MENU button while in SAT mode.

2. Turn the CENTER CONTROL knob until Presets List is highlighted.

3. Press the JOYSTICK to mark the selection.

NOTE: The check-mark indicates that the preset list is available. If the check-mark is already selected press the MENU button again.

Channel Lock

Select Channel Lock to enable and/or disable desired channels. The SEEK and SCAN function will then only display channels without parental lock.

Re-Subscribe to Sirius Satellite Radio

Select Subscription to access the Subscription Information screen.

New vehicle purchasers or lessees will receive a free one-year subscription to Sirius Satellite Radio and Real-time Traffic Service with your navigation radio. Following expiration of the one-year free services, it will be necessary to access the information on the Subscription Information screen in order to re-subscribe.

Write down the SIRIUS ID numbers for your receiver. To reactivate your service either call the number listed on the screen or visit the provider online.

SAT VIDEO MENU (if equipped)

While in SATV Mode press the MENU button to display the SATV Menu.

Re-Subscribe to SIRIUS Backseat TV™

Select Subscription to access the Subscription Information screen. New vehicle purchasers or lessees will receive a free one-year subscription to SIRIUS Backseat TV™ with your radio. Following expiration of the one-year free services, it will be necessary to access the information on the Subscription Information screen in order to re-subscribe.

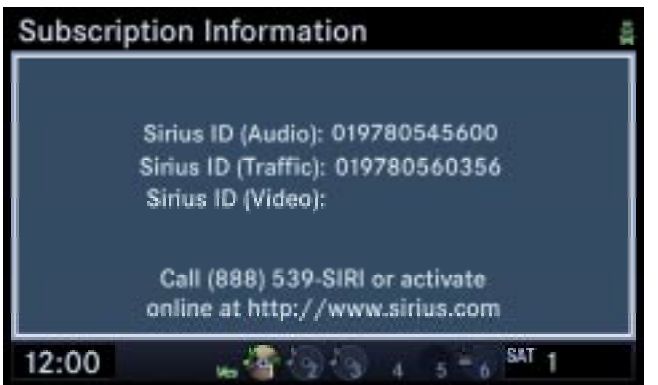

rite down the SIRIUS ID numbers for your receiver. To reactivate your service either call the number listed on the screen or visit the provider online.

NOTE: SIRIUS Backseat TV™ is not currently available in Canada.

Display Settings

Press the SETUP button and select Display Setting to access the Display Settings menu.

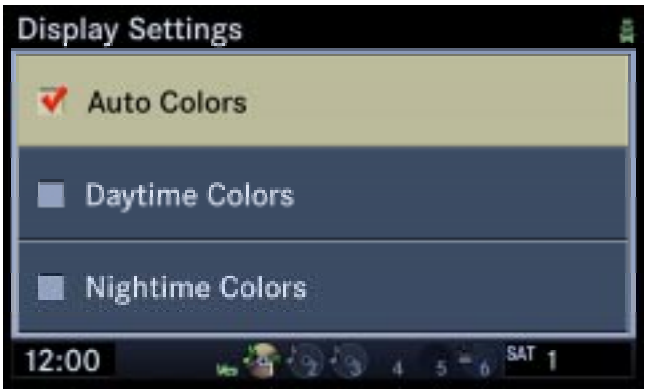

Select Daytime Colors to switch to manual daytime mode and to adjust the brightness of the display using daytime colors.

Select Nighttime Colors to switch to manual nighttime mode and to adjust the brightness of the display using night time colors.

Select Auto Colors to switch to automatic daytime/ nighttime mode and to control the brightness of the display using the light switch of the vehicle.

View Settings

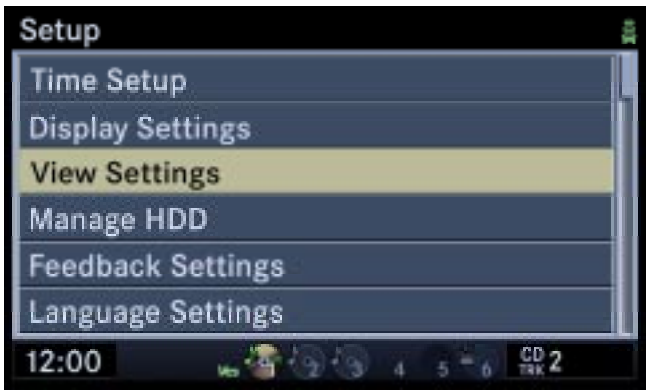

Press the SETUP button and select View Setting to access the View Settings menu.

Check Default View to enable the default view mode.

Check Picture View to enable the picture view mode.

Check Map View to enable the map view mode.

Check Screen Saver Black to enable the screen saver.

In Default View the vehicle brand logo is displayed in the right half of the screen.

In Picture View a pictures can be displayed on the right half of the radio screen. Refer to the Hard Disk Drive section for a detailed example.

In Map View mode the navigation map or turn-by-turn navigation (as shown above) can be displayed on the right half of the radio screen (see Navigation View Settings for more information).

In Screen Saver View the screen stays black. Press any button on the radio to de-activate the screen saver.

ParkView™ (if equipped)

When equipped with ParkView™, the radio display shows the rear view camera picture as soon as the shifter is in position R for vehicles with automatic transmission. In vehicles with manual transmission the reverse gear must be engaged.

MEDIA

Disc Changer Mode

Overview

The navigation radio is equipped with a CD/DVD changer player.

Toggle between the media modes by pressing the MEDIA button. The disc changer mode is selected when the DISC tab is highlighted.

Disc Requirements

CAUTION!

This disc player will accept a 4 3/4 inch (12 cm) disc only. The use of other sized discs may damage the disc player mechanism.

The radio is capable of playing compact discs (CD), recordable compact discs (CD-R), rewritable compact discs (CD-RW), recordable DVD-R, DVD+R, DVD-RW, and DVD+RW, compact discs.

Your radio will play the following formats:

MP3, WMA, CD Audio, DVD Audio, and DVD Video, DVD-ROM, DVD Plus, DualDisc, SA-CD (CD Layer).

Do not insert anything other than the supported CD/DVD formats.

SACD (SACD layer) VCD, SVCD, VCD format on DVD and MPEG-4 are not supported.

A complete list of supported CD/DVD formats is available at http://www.chrysler.com/mygig/

Inserting a Disc

1. Press the LOAD button once.

2. Select an empty slot by pressing one of the preset buttons (1-6).

3. Wait until the radio displays Insert Disc on the left side of the screen.

4. With the printed side upwards, insert the disc into the disc slot of the radio. The radio pulls the disc automatically. The radio selects the appropriate mode after the disc is recognized, and starts playing the first track. The display shows “Reading...” during this process.

NOTE: Use only standard size discs. Discs that have been modified with an adhesive label should not be used in the CD/DVD player.

High definition content and media (e.g HD-DVD, Blue-Ray) is not supported.

NOTE: On MP3 and WMA CD's with a large number of songs, it may take several seconds to read, play, and display information for all songs on the disc.

NOTE: Recording your own CD on a home computer at a lower write speed will result in a more consistent quality.

NOTE: Do not insert a disc with a peeled off label.

Removing a Disc

1. Press the EJECT button.

2. Select a disc by pressing one of the preset buttons (1-6).

3. The disc is ejected and can be removed.

NOTE: If the disc is not removed within approximately 10 seconds, the unit pulls it back into the slot (park position). The disc may be ejected when the ignition is off.

Selecting a Disc
Press one of the preset buttons (1-6) to select and play a disc in a specific slot of the disc changer, while in DISC mode.

Selecting Disc Mode
Toggle between the media menus by pressing the MEDIA button.

NOTE: When a disc is inserted, the appropriate mode is automatically selected once the disc is recognized.

Scan Search
Press the SCAN button.

The individual tracks of the disc will be played in succession for 10 seconds each.

Press the SCAN button again to stop the scan function.

Next Track
Press the SEEK up button. The next track on the disc is played. Once the last track has been reached in the forward direction, the unit will loop back to the first track.

Previous Track
Pressing the SEEK down button plays the previous track. If the first track has been reached in the backward direction, the unit will switch from the first track to the last track. If a track has been playing for more than 1 second when SEEK down button is pressed, the unit will skip back to the beginning of the current track.

Fast Forward Track
Press the FF button. The audio will be heard at a reduced level while going through the track in this mode. Stop the fast-forward by releasing the button.

Rewind Track
Press the RW button. The audio will be heard at a reduced level while going through the track in this mode. Stop the fast reverse by releasing the button.

Displaying the Elapsed Title Time
The elapsed title time of the current playing track is displayed in the left center of the screen.

Select Title from List
Press LIST to display a list of the titles of the currently playing disc. Select the desired track you wish to play by turning the CENTER CONTROL knob until the track is highlighted. Press the JOYSTICK to play the highlighted track.

Press the LIST button again to hide the list.

Disc Info
Press the INFO button to display additional information, if available (e.g. Title, Artist, Album, Genre) in the right half of the screen.

Press the INFO button again to close the information.

Gracenote Music Recognition Technology

This navigation radio is equipped with the Gracenote Music Recognition Service, with an embedded database to look up album, song title, genre and artist information.

Data will be found for most Audio CDs (CDA discs). Data will not be found for DVDs or data discs (those with MP3 or WMA files).

Music recognition technology and related data are provided by Gracenote®. Gracenote is the industry standard in music recognition technology and related content delivery. For more information visit www.gracenote.com.

NOTE: Visit http://www.chrysler.com/mygig/ for update information.

Copy Disc to Hard-Drive
Read about copying discs in the Hard Disk Drive section of this manual.

Disc Menu
While in disc mode with inserted audio disc, press the MENU button to access the Disc Menu.

Check-mark **Random** to play the titles on the disc in random order.

Check-mark **Repeat** to repeat the currently playing title.

Check-mark **Normal Play Order** to play discs in normal order.

Select **Stop** to stop the currently playing disc.

Select **Pause** to pause the currently playing disc.

Select **Play** to play the currently playing disc.

Playing a MP3/WMA Disc

1. Press the LOAD button once.

2. Select an empty slot by pressing one of the preset buttons (1-6).

3. Wait until the radio displays Insert Disc on the left side of the screen.

4. With the printed side upwards, insert the disc into the disc slot of the radio. The radio pulls the disc automatically. The radio selects the appropriate mode after the disc is recognized, and starts playing the first track. The display shows “Reading...” during this process.

A MP3/WMA disc may contain audio files in a folder structure. The radio may play the audio files in the first available folder.

The folder, if any, are shown in the list view.

5. Press the LIST button, if the list is not displayed.

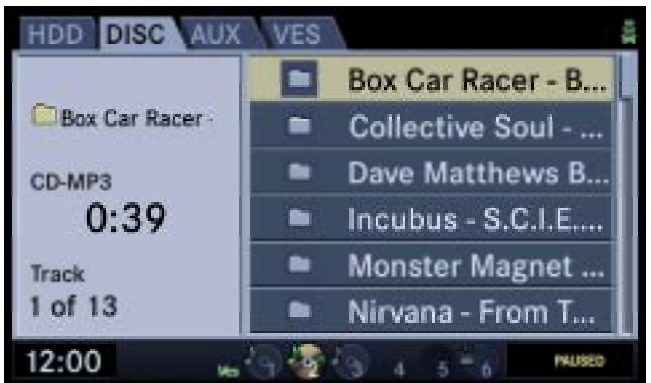

6. Turn the CENTER CONTROL knob to highlight a folder.

7. Press the JOYSTICK to open a highlighted folder and to play the songs in the folder.

Playing a Video DVD

NOTE: To view a DVD video on the radio screen is not available in all states, and the vehicle must be stopped, and the shifter must be in position P for vehicles with automatic transmission. In vehicles with manual transmission the parking brake must be engaged.

Insert a video DVD first.

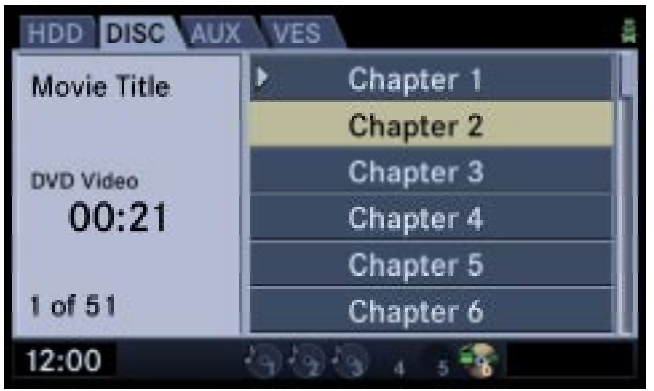

The playback starts automatically after the DVD video is recognized by the disc drive.

Press the LIST button to display a list of available chapters or tracks. Select a chapter or track in the list to start playback from the selected section.

DVD MENU Controls

If you insert a DVD video disc that contains a top menu, a menu may appear.

Use the JOYSTICK to navigate menu items, and press the JOYSTICK to select menu items.

DVD Playback Controls

In video playback mode press the MENU button to show the DVD playback controls.

To pause playback select Pause.

To stop playback select Stop.

Press the FF button during playback to fast forward playback

Press the RW button during playback to fast reverse playback.

Press the SEEK up button to locate succeeding chapters or tracks.

Press the SEEK down button to start playback from the beginning of the current chapter or track. When you press twice in quick successions, playback starts from the beginning of the preceding chapter or track.

DVD Video Menu

While in disc mode with inserted video DVD, press the MENU button to access the DVD Video Menu.

Select **Show Video** in the DVD Menu to view the video on the screen.

Select **Hide Video** in the DVD Menu to view the video on the screen.

Select **DVD Menu** in the DVD Menu to view the top menu, if available on the disc.

Select **DVD Setup** in the DVD Menu to view the DVD Setup menu.

In the DVD Setup menu you may select Menu Language, Audio Language, Subtitle, Camera Angle, Aspect Ratio, and Brightness settings by highlighting selecting the corresponding functions. Some of the functions are disabled, if the inserted disc does not support the functionality.

Disc Skipping

Skipping is typically caused by a damaged (scratched) disc. This will result in a 10 second jump forward until the damaged area is passed.

Temperature Protection

If the temperature of the disc reader during operation becomes too high, a popup message will inform the user of an over temperature situation. The unit switches to radio mode until the disc reader temperature has dropped to a normal level.

Hard Disk Drive Mode (HDD)

The HDD mode gives you access to the audio files on the internal hard disk drive. It functions similar to a CD player, with the exception that the internal HDD can hold more tracks. It can hold approximately 1,600 four-minute CD-quality songs.

Before using the HDD mode, you will need to copy tracks to the internal hard drive.

The files will be stored on the internal hard disk drive and can be used in the HDD mode.

Copy Audio Disc to Hard-Drive

1. Insert and select a disc.

2. Press the MENU button.

3. Select Copy Track to copy the currently playing music track of the inserted disc, or select Copy Disc to copy the entire disc to the hard disk drive.

During the copy process, the disc player cannot play audio.

The copy progress is shown in the display.

It is possible to listen radio modes during this process. Copying time is greater than 5x the normal playback rate.

NOTE: When copying CD-Audio to HDD, audio files are converted from CD Audio to WMA. DVD-Audio cannot be copied to the HDD.

Press the JOYSTICK to stop the copy process.

Copy WMA/MP3 Files to Hard-Drive
You can copy MP3, and WMA formatted compressed audio files from a disc or via USB (e.g., USB stick).

It is recommended to sort music files into folders.

Example:

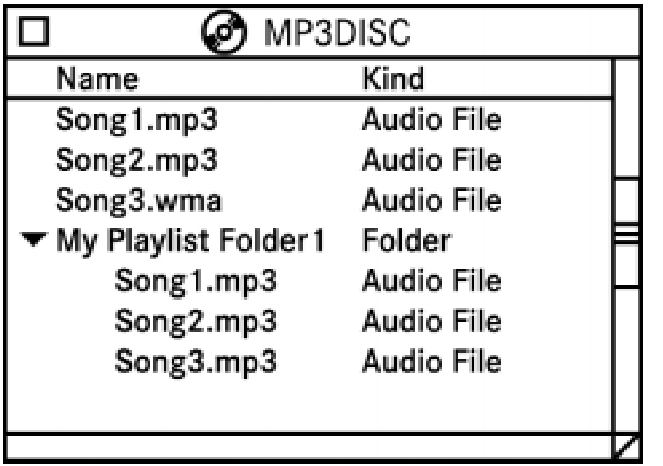

Songs located in the root level (top level) of the disc or USB device are saved in a playlist named Root_Level _Songs.

Once the songs are copied, the playlist will be named by the originating folder name.

For the example above the list on the HDD will show the following:

Disc_Root_Level Songs (Playlist 1)

- Song 1.mp3 (First song in playlist 1)
- Song 2.mp3 (Second song in playlist 1)
- Song 3.wma (Third song in playlist 1)

My Playlist Folder 1 (Playlist 2)

- 01 Song.mp3 (First song in playlist 2)
- 02 Song.mp3 (Second song in playlist 2)
- 03 Song.mp3 (Third song in playlist 2)

Copying from Disc

1. Insert a disc with MP3, WMA files.

2. Press the MENU button while the disc is playing.
3. Select either Copy Track, Copy Folder, or Copy Disc.

During the copy process, the disc player cannot play audio.

The copy progress is shown in the display.

It is possible to listen radio modes during this process.

Copying from USB

1. Insert a USB device.

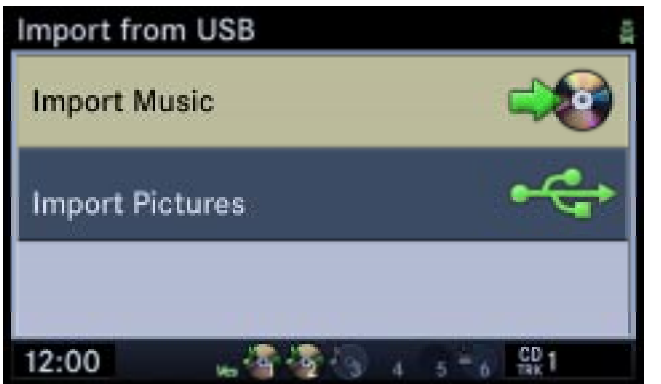

2. Select Import Music.

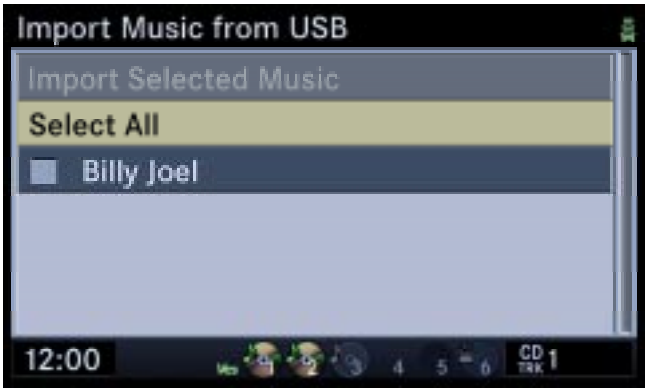

3. Check-mark the desired music, titles, folders, or Select All.

4. Highlight Import Selected Music.

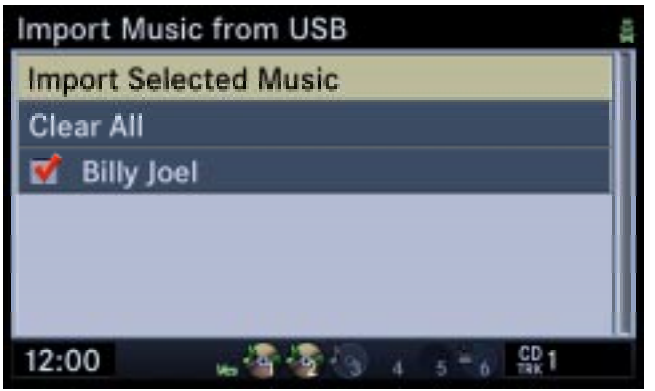

5. Press the JOYSTICK to start the copy process.

6. Press the JOYSTICK again to stop the import.

Playing Audio Files from the Hard Disk Drive

You can play songs directly from the internal hard disk drive.

1. Press the MEDIA button repeatedly until the HDD tab is highlighted.

2. Press the LIST button to display a song list.

An arrow indicates the currently playing song.

3. Turn the CONTROLLER to highlight a song.
4. Press the JOYSTICK to play the highlighted song.

Playing Audio Files by Music Categories

1. Press the MUSIC TYPE button to select an available category.

The navigation radio can sort the files by playlist, by song name, by artist, by genre, by album, or by year.

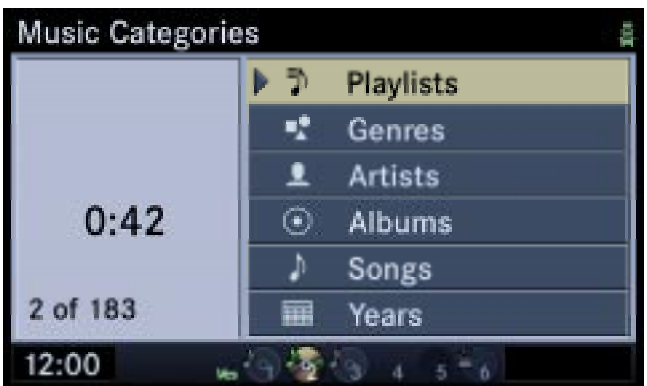

2. Select Playlists or the desired category for this example.

3. Select the desired playlist to play it.

Select PLAY ALL PLAYLISTS to play all available playlists.

Next Track

Press the SEEK up button. The next track of the current album is played. Once the last track has been reached in the forward direction, the unit will loop back to the first track. If a track has been playing for more than 10 seconds when SEEK down button is pressed, the unit will skip back to the beginning of the current track, instead of jumping to the previous track.

Previous Track

Press the SEEK down button. The previous track of the current album is played. If the first track has been reached in the backward direction, the unit will switch from the first track to the last track. If a track has been playing for more than 10 seconds when SEEK down button is pressed, the unit will skip back to the beginning of the current track.

Fast Forward Track
Press the FF button. The audio will be heard at a reduced level while going through the track in this mode. Stop the fast-forward by releasing the FF button.

Rewind Track
Touch the RW button. The audio will be heard at a reduced level while going through the track in this mode. Stop the fast reverse by releasing the RW button.

Displaying the Elapsed Title Time
The elapsed title time of the current playing track is displayed on the left side of the screen.

HDD Menu
While in HDD mode, press the MENU button to access the HDD Menu.

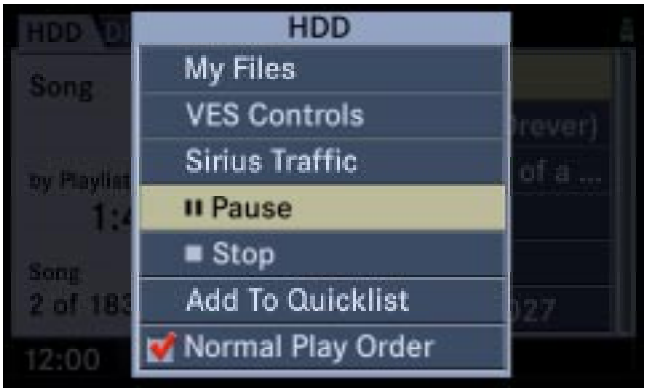

Random Playback
The random play function plays random tracks from the hard disk drive. Either check-mark Random to switch the random play function on or off, or check-mark Normal Play Order to turn Random playback off.

Repeat Track
The repeat track function repeats the currently played track. Check-mark Repeat to switch the repeat track function on or off.

Normal Play Order
The normal play order function play all songs in normal order.

Add To Quicklist
The Add To Quicklist function adds the currently playing song to a playlist named ‘QuickList’.

Editing Playlists on the Hard Disk Drive

1. While in the HDD mode press the MENU button to access the HDD Menu.

2. Select the My Files function.

3. Select My Music.

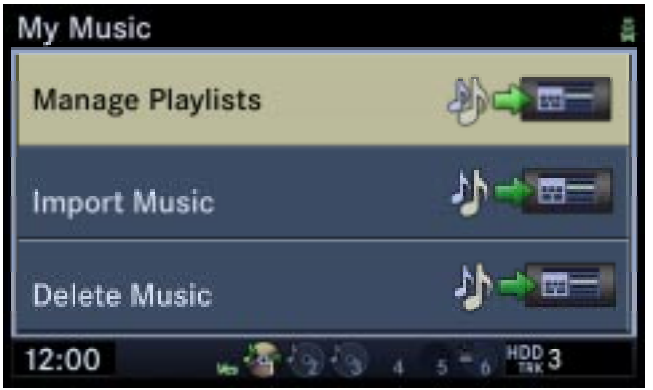

4. Select the Manage Playlists function.

From the **Manage Playlists Menu** you may create a new playlist, rename a playlist, add songs to a playlist, remove songs from a playlist, rearrange a playlist, or delete a playlist.

Create a New Playlist

1. Select Create New Playlist.

2. Enter a name for the new playlist in the speller.

3. Highlight CONTINUE and press the JOYSTICK.

The playlist is now created but does not yet contain any music.

4. Select one of the filters to display a list of songs.

In this example we select to filter by Artist.

The radio lists all available artists from the internal HDD.

5. Turn the CENTER CONTROL knob until the desired artist is highlighted and press the JOYSTICK.

6. Check-mark the songs you would like to add to the playlist.

You may use the Select All function to select all songs in the list, or the Clear All function to uncheck all songs.

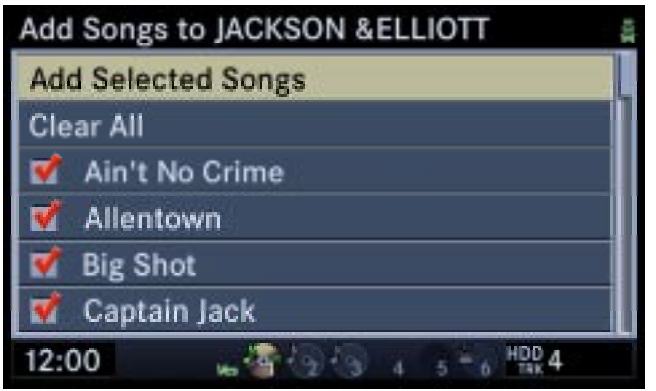

7. Once you made your selection highlight Add Selected and press the JOYSTICK.

You may now select another filter and add more songs to the playlist.

To play the new playlist:

1. Press the MUSIC TYPE button.

2. Select Playlists.

3. Turn the CENTER CONTROL knob until the new playlist is highlighted.

4. Press the JOYSTICK.

5. Select a song in the list and press the JOYSTICK again to play the playlist.

Rename a Playlist

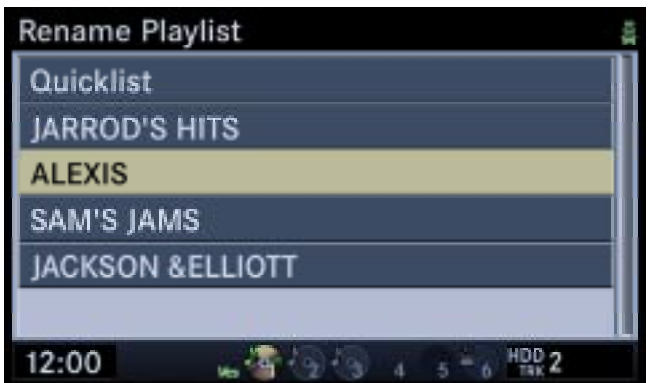

1. Select a playlist and press the JOYSTICK.

2. You may press the DELETE button to remove existing characters.

3. Enter the name and select CONTINUE.

The playlist is now renamed. You may rename another playlist in the list.

To play the renamed playlist:

1. Press the MUSIC TYPE button.
2. Select Playlists
3. Turn the CENTER CONTROL knob until the renamed playlist is highlighted.
4. Press the JOYSTICK.
5. Select a song in the list and press the JOYSTICK again to play the playlist.

Add Songs to a Playlist

1. Select a playlist and press the JOYSTICK.
2. Select a filter.

In this example we use by Album.

3. Select an album.

4. Check-mark the songs you would like to add to the playlist.

You may use the Select All function to select all songs in the list, or the Clear All function to uncheck all songs.

5. Once you made your selection highlight Add Selected Songs and press the JOYSTICK.

You may now select another filter and add more songs to the playlist.

To play the new playlist:

1. Press the MUSIC TYPE button.

2. Select Playlists.

3. Turn the CENTER CONTROL knob until the new playlist is highlighted.

4. Press the JOYSTICK.

5. Select a song in the list and press the JOYSTICK again to play the playlist.

Remove Songs from a Playlist

1. Select a playlist and press the JOYSTICK.

2. Check-mark the songs you would like to have removed from the playlist.

You may use the Select All function to select all songs in the list, or the Clear All function to uncheck all songs.

3. Once you made your selection highlight Remove Selected Songs and press the JOYSTICK.

To play the new playlist:

1. Press the MUSIC TYPE button.
2. Select Playlists.
3. Turn the CENTER CONTROL knob until the new playlist is highlighted.
4. Press the JOYSTICK.
5. Select a song in the list and press the JOYSTICK again to play the playlist.

Rearrange Songs in a Playlist

1. Select a playlist and press the JOYSTICK.
2. Highlight the song you would like to have moved within the playlist.
3. Press the JOYSTICK.

4. Turn the CENTER CONTROL knob to reposition the song in the list.
5. Press the JOYSTICK to confirm.

You may now select another song to be rearranged.

To play the new playlist:

1. Press the MUSIC TYPE button.

2. Select Playlists.

3. Turn the CENTER CONTROL knob until the new playlist is highlighted.

4. Press the JOYSTICK.

5. Select a song in the list and press the JOYSTICK again to play the playlist.

Delete a Playlist

1. Check-mark the playlists you would like to have removed from the list.

You may use the Select All function to select all playlists in the list, or the Clear All function to uncheck all playlists.

2. Once you made your selection highlight Delete Selected Playlists and press the JOYSTICK.

You may now select another playlist to be deleted.

NOTE: Deleting a file from a Playlist will not delete it from the Hard Drive.

Deleting Songs Permanently from the Hard Disk Drive

1. While in the HDD mode press the MENU button to access the HDD Menu.

2. Select the My Files function.

3. Select My Music.

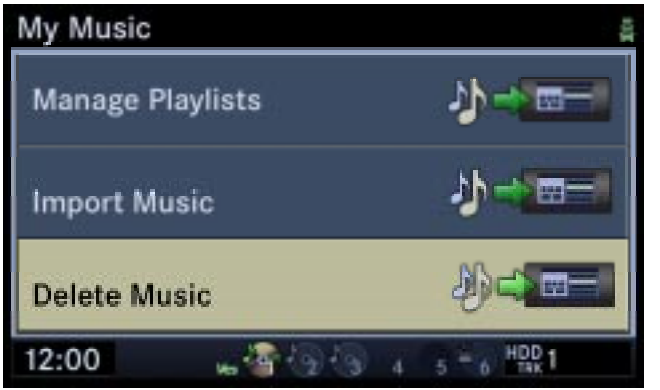

4. Select the Delete Music function.

5. Select one of the filters to display a list of songs.

In this example we select to filter by Artist.

The radio lists all available artists from the internal HDD.

6. Turn the CENTER CONTROL knob until the desired artist is highlighted and press the JOYSTICK.

7. Check-mark the songs you would like to permanently delete.

You may use the Select All function to select all songs in the list, or the Clear All function to uncheck all songs.

8. Once you made your selection highlight Delete Selected Songs and press the JOYSTICK.

You may now select another filter and delete more songs from the hard disk drive.

Deleting All Music Files from the Hard Disk Drive

1. Press the SETUP button.

2. Select the Manage HDD function.

This menu displays the available space on the hard disk drive, and allows you to delete pictures, music files, and address book entries.

Manage HDD
Display Available Space on HDD
Delete All of My Music files
Delete All of My Pictures files
Delete All of My Address Book entries
12:00
HDD 1

3. Highlight Delete All of My Music files.
4. Press the JOYSTICK.

NOTE: If you confirm the next step, all playlists and all songs contained in them, will be permanently deleted. Neither songs nor playlists can be recovered.

5. Select YES and press the JOYSTICK again.

Importing Pictures

It is possible to import display pictures to the internal hard disk drive. You can import pictures either from DISC or from USB.

Refer to the Remote Devices section in this manual for a description of the USB Connector.

The pictures can be displayed on the right half of the radio screen.

WARNING!
It is not possible to copy files of a USB device while the vehicle is in motion.

In the default mode, the vehicle brand logo is displayed in the right half of the screen.

It is recommended to change the picture dimensions on a PC or Digital Camera to 466 by 338 pixels before the import.

NOTE: USB devices (e.g., camera memory USB adaptors, etc.) must comply with the MSD (Mass Storage Device) standard. This USB terminal can provide power to the inserted device. The devices current limitation must be less or equal to 500mA.

1. Press the Menu button.
2. Select the Manage My Files function.

3. Select My Pictures.

4. Highlight Add Picture.
5. Press the JOYSTICK.

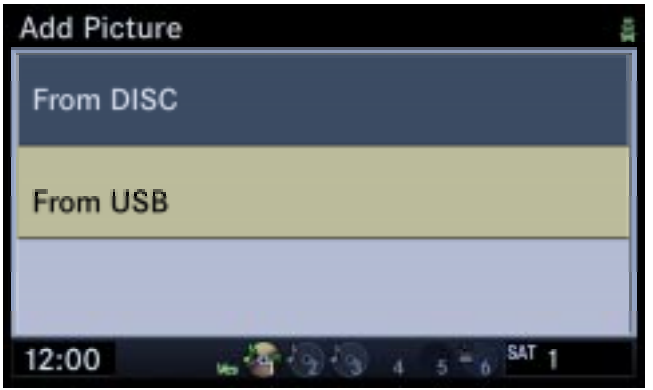

You can import pictures either from DISC or from USB.

NOTE: Files must be in the root directory (top level) of the disc or USB device to be recognized.

6. Select USB for this example.
7. Insert the USB device containing the pictures.

8. Select the desired picture.
9. Press the JOYSTICK.
10. Select YES to confirm your selection.
11. Repeat steps 4. to 10. to add more pictures.

The navigation radio can store 48 user pictures.

Deleting Selected Pictures

1. Press the Menu button.
2. Select the Manage My Files function.
3. Select My Pictures.

4. Highlight a picture.
5. Press the JOYSTICK.
6. Highlight Delete.

7. Press the JOYSTICK.
8. Confirm YES to delete the selected picture.

Deleting All Pictures

1. Press the SETUP button.

2. Select the Manage HDD function.

This menu displays the available space on the hard disk drive, and allows you to delete pictures, music files, and address book entries.

Manage HDD
Display Available Space on HDD
Delete All of My Music files
Delete All of My Pictures files
Delete All of My Address Book entries
12:00
SAT 1

3. Highlight Delete All of My Picture files.

4. Press the JOYSTICK.

NOTE: If you confirm the next step, all playlists and all songs contained in them, will be permanently deleted. Neither songs nor playlists can be recovered.

5. Select YES and press the JOYSTICK again.

Set Pictures as Picture View

1. Press the Menu button.
2. Select the Manage My Files function.
3. Select My Pictures.

NOTE: When the vehicle is in motion, only the first 8 pictures are available.

4. Highlight a picture.
5. Press the JOYSTICK.
6. Highlight Set as Picture View.

7. Press the JOYSTICK.
8. Confirm YES to confirm the selected picture.

Slideshow

NOTE: The slideshow is not available, when the vehicle is in motion.

1. Press the Menu button.
2. Select the Manage My Files function.
3. Select My Pictures.
4. Highlight a picture.
5. Press the JOYSTICK.
6. Highlight Start Slideshow.

7. Press the JOYSTICK.
8. Press the JOYSTICK again to stop the slideshow.

REMOTE DEVICES

Sirius Backseat TV™ (if equipped)

Sirius Backseat TV™ Mode

In order to receive SIRIUS Backseat TV™, the vehicle needs to be outside with a clear view to the sky. If the screen shows Acquiring Signal, you might have to change the vehicle position in order to receive a signal. In most cases, the satellite radio does not receive a signal in underground parking garages or tunnels.

Channel List

Press the LIST button to display a list of available video channels. Press LIST again to hide the video channel list.

View Sirius Backseat TV™ on the Radio Screen

NOTE: To view SIRIUS Backseat TV™ on the radio screen, the vehicle must be stopped, and the shifter must be in position P for vehicles with automatic transmission. In vehicles with manual transmission the parking brake must be engaged.

In order to watch the desired SIRIUS Backseat TV™ channel, press the Menu button and select Show Video.

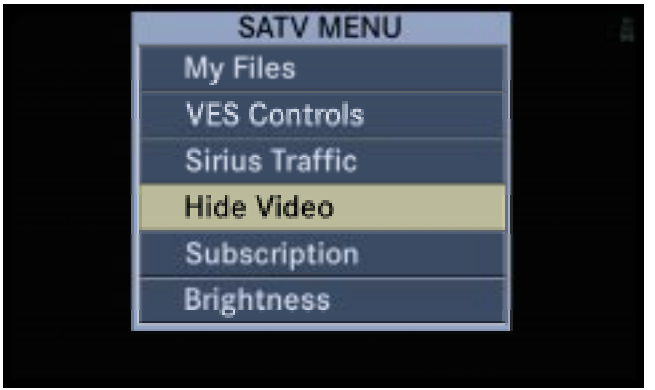

In order to hide the Sirius Backseat TV™ video, select Hide VIDEO in the SATV MENU.

Change a Channel

Either press the SEEK up or the SEEK down button or turn the TUNE knob to play the next available channel.

NOTE: Changing a channel on the Sirius Backseat TV™ receiver takes longer than changing the channel on the radio receiver.

Press the SCAN button for a five second preview of each available channel. Press the SCAN button again to stop the scan function.

Video Program Information

Press the INFO button to display additional program information in the right half of the screen.

Press the INFO button again to close additional program information.

Video Entertainment System (VES)™

The navigation radio can remotely control the VES™. Refer to the VES™ user's manual for more information.

Receiving audio/video from the VES™

You can play audio from the VES™ through the vehicles speaker system. If you have a VES™ with a video player, you can also see the video on the radios display, if the vehicle is parked.

The VES tab becomes available after the VES™ system is turned on. Press the MODE button repeatedly until the VES audio source is selected.

Press the MENU button and select SELECT VES SOURCE.

Select the desired source to play the selected source in the vehicle cabin.

NOTE: The availability of a VES source is based on the type of VES™ in the vehicle. A DVD Player is not available if there is no DVD player in the VES™ or there is no DVD in the player.

A device must be plugged in to the AUX jack of the VES™ to be available.

In this example the Rear AUX 1 audio is playing on the navigation radio. You can play the VES™ source through the navigation radio sound system.

Sending audio/video and controlling the VES™

The navigation radio can also control the VES™.

All sources are played through the VES™ headphones.

Refer to the VES™ user's manual for more information on controlling the rear VES™ through the remote control.

To access the rear VES™ press the MENU button.

Select VES Controls to display the Rear VES Controls.

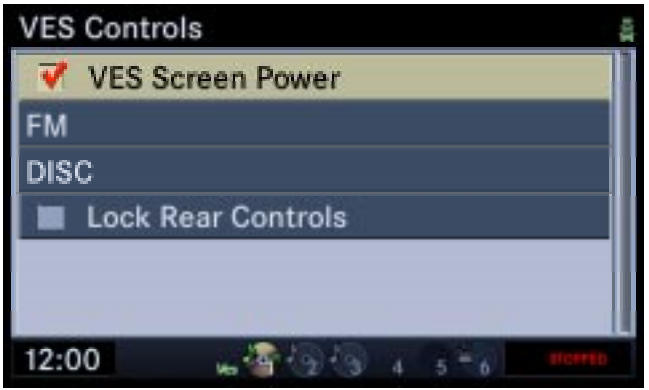

The Rear VES Controls are displayed.

Check or uncheck the VES Screen Power to turn the VES™ screen on or off.

The second entry shows the source of the rear VES channel 1 (Plays FM tuner in this example)

The third entry shows the source of the rear VES channel 2 (Plays DISC in this example)

Check the Lock Rear Controls to disable the controls on the VES™ remote control unit. Once the VES™ is locked, it is not possible to use the VES™ controls or the VES™ remote control.

Uncheck the Lock Rear Controls to enable the controls on the VES™ remote control unit.

A VES™ headset can listen to either audio channel 1 or audio channel 2.

Select channel 1. In this example channel one plays the FM RADIO tuner audio.

The left half of the screen displays the audio source information, which is in this case the radio frequency 87.7 MHz of Preset 1.

The right half of the screen shows the selected audio source.

Turn the CENTER CONTROL knob to change select a different source.

Press the LIST button to display the selected source details.

In this case the FM preset list within the selected tuner is displayed.

You may select a preset to change the station, or turn the TUNER knob, or press the SEEK up or SEEK buttons to change the radio station.

NOTE: The navigation radio cannot play both AM or FM at the same time.

Press the LIST button again to display a list of available sources for the rear VES.

Playing a Video DVD for the rear VES™

1. To view a DVD video on the rear VES™ radio screen, insert a video DVD.

The playback starts automatically after the DVD video is recognized by the disc drive.

2. To access the rear VES™ press the MENU button.

3. Select VES Controls to display the Rear VES™ Controls.

The Rear VES Controls are displayed.

4. Select channel 2 on your VES™ headset.

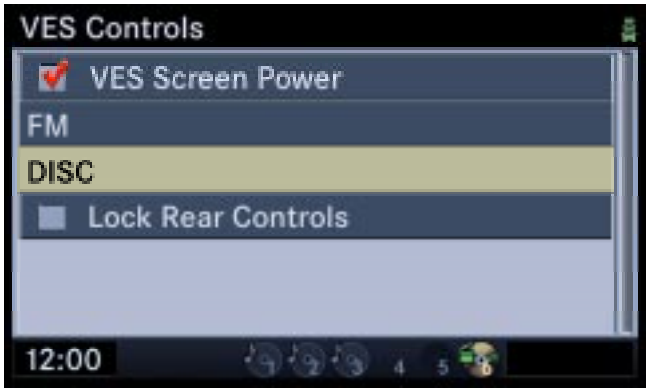

For this example the third entry shows the source of the rear VES Channel 2 plays DISC.

5. Select DISC.

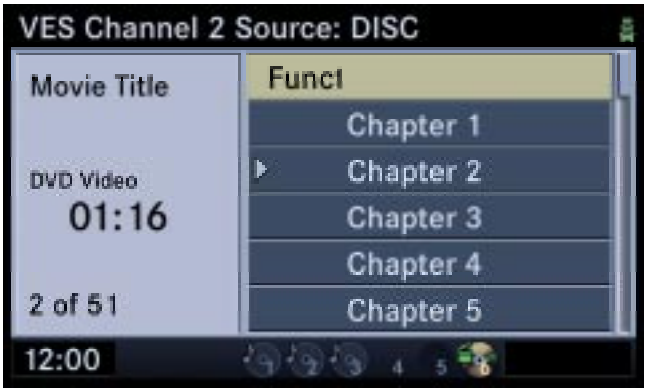

6. Turn the CENTER CONTROL knob to select Disc Functions.

In this screen you may Start, Stop, or Pause the video.

Select Show Video to display the video on the rear VES™ screen.

If the inserted DVD provides a menu, you may select DVD Menu.

USB Connector

It is possible to transfer audio files or pictures files to the navigation radio. Files can be on a disc or on a USB device (e.g., USB stick). The USB connector is covered by a small cover, which protects the connector from dust or damage.

NOTE: USB devices (e.g., camera memory USB adaptors, etc.) must comply with the MSD (Mass Storage Device) standard. This USB terminal can provide power to the inserted device. The devices current limitation must be less or equal to 500mA.

The transfer speed for this USB connector is approximately 2 megabytes per second.

MP3 player devices cannot be controlled through the USB connector. Some player devices save music files in MP4 format, which cannot be played in this radio. Some copy protected music (e.g., downloads from the internet) cannot be played on this radio.

Please see your Chrysler Dealership or visit http://www.chrysler.com/mygig/ for supported devices.

NOTE: Some MP3 Player do not allow songs to be copied into other devices.

How to Open the Cover

1. Place finger under the pull arrow and pull forward.

NOTE: The flap is attached and should not be removed! Do not use a tool (e.g. screw driver, nail file, etc.) to open the flap, as this could cause damage to the face of the radio.

CAUTION!

Never force any connector into the ports of your radio. Make sure your connectors are the identical shape and size before you connect.

How to close the cover

1. Using your thumb to place the flap into the frame as shown above.

2. Then push on the flap, to secure in place.

AUX Mode

The AUX connector allows you to connect the headset output of an audio device (e.g., MP3 player) to the navigation radio. The audio of the connected device will then be played through the navigation radio sound system.

Connect a 3.5 mm *stereo* mini-jack cable as shown above (not provided with the radio) to the AUX connector on the navigation radio and to the earphone connector of your audio device.

The display will switch automatically to the AUX mode, when a 3.5 mm *stereo* mini-jack cable has been connected. The radio screen will revert back to the last tuner mode when the cable is unplugged.

To change to AUX mode while the cable is connected to the unit, press the MEDIA button until the AUX tab is highlighted on the top of the screen.

Adjust the volume with the ON / OFF VOLUME knob, or with the volume of the attached device.

The control of the external device (e.g., selecting playlists, play, fast forward, etc.) cannot be provided by the radio; use the device controls instead.

WARNING!

Driving is a complex activity that requires your full attention. If yoúre engaged in driving or any activity that requires your full attention, we recommend that you not use external device controls.

NOTE: Inserting of a mono jack will result in improper audio playback

SPEECH DIALOGUE SYSTEM

Voice Recognition System (VR)

Voice Recognition System (VR)

This Voice Recognition System allows you to control your AM and FM radio, satellite radio, disc player, navigation system, hard disk drive storage, and a memo recorder.

WARNING!

Any voice commanded system should be used only in safe driving conditions and all attention should be kept on the roadway ahead. In a stressful situation, take care to speak into the Voice Interface System as calmly and normally as possible. The ability of the Voice interface System to recognize user voice commands may be negatively affected by rapid speaking or a raised voice level. Please do not use the voice interface system in an emergency situation, as the tone of your voice may change in a stressful situation.

This voice recognition system allows you to control your AM and FM radio, your satellite radio, your disc player, navigation system, hard disk storage, and a memo recorder. When you press the VR button, you will hear a beep. The beep is your signal to give a command.

NOTE: If you do not say a command within 3 seconds, the system will present you with a list of options.

You can always recall the help menus by saying HELP.

If you ever wish to interrupt the system while it lists options, press the VR button, listen for the beep, and say your command.

Pressing the VR button while the system is speaking is known as “barging in”. The system will be interrupted and you can add or change commands. This will become helpful once you start to learn the options.

NOTE: At any time you can say the words CANCEL, REPEAT, HELP, or MAIN MENU.

These commands are universal and can be used from any menu or screen. For other universal commands, refer to the command section in this manual.

All other commands can be used depending upon the active application.

For example: If you are in the navigation menu and you are listening to FM radio, you can speak commands from the navigation menu or from the FM radio menu.

When using this system, you should speak clearly and at a normal speaking volume.

The system will best recognize your speech if the windows are closed, and the heater- / air-conditioning fan is set to low.

At any point, if the system does not recognize one of your commands, you will be prompted to repeat it.

To hear the first available Menu, press the VR button and say HELP or MAIN MENU.

Display Menu
In addition to audible help, the navigation radio is able to display the most important available commands on the screen.

NOTE: Press the BACK button to CANCEL the currently active voice command session.

Commands
The Voice Recognition understands two types of commands. Global commands are available at all times. Local commands are available if the supported radio mode is active.

Changing the volume

1. Start a dialogue by pressing the VR button.
2. Say a command (e.g., HELP).
3. Use the ON/OFF VOLUME rotary knob to adjust the volume to a comfortable level while the voice recognition system is speaking.

Main Menu
Start a dialogue by pressing the VR button.

You may say MAIN MENU to switch to the SDS main menu.

In this mode you can say the following commands:

- RADIO (to switch to the radio mode)
- HARD DRIVE (to switch to the HDD mode)
- DISC (to switch to the disc mode)
- VES (to switch to the VES mode)
- MEMO (to switch to the memo recorder)
- NAVIGATION (to switch to the navigation mode)
- SYSTEM SETUP (to display the system setup menu)

Radio Menu
You may say RADIO to switch to AM, FM, or SAT.

Say RADIO MENU.

In this mode you may say the following commands:

- RADIO AM (to switch to the AM band)
- RADIO FM (to switch to the FM band)
- SATELLITE RADIO (to switch to the satellite radio)

Radio AM
To switch to the AM band say AM or RADIO AM.

In this mode you may say the following commands:

- FREQUENCY (to change the frequency)
- NEXT STATION (to select the next station)
- PREVIOUS STATION (to select the previous station)
- RADIO MENU (to switch to the radio menu)
- MAIN MENU (to switch to the main menu)

Radio FM
To switch to the FM band say FM or RADIO FM.

In this mode you may say the following commands:

- FREQUENCY (to change the frequency)
- NEXT STATION (to select the next station)

- PREVIOUS STATION (to select the previous station)
- RADIO MENU (to switch to the radio menu)
- MAIN MENU (to switch to the main menu)

Satellite Radio
To switch to satellite radio mode say SAT or SATELLITE RADIO.

In this mode you may say the following commands:

- STATION (1-250) (to change the station)
- NEXT STATION (to select the next station)
- PREVIOUS STATION (to select the previous station)
- LIST STATIONS (to hear a list of available stations)
- SELECT NAME (to say the name of a station)
- RADIO MENU (to switch to the radio menu)
- MAIN MENU (to switch to the main menu)

Sirius Backseat TV™
To switch to SIRIUS Backseat TV™ mode say SAT-V or SATELLITE VIDEO. In this mode you may say the following commands:

- CHANNEL (250-253) (to change the channel)
- NEXT CHANNEL (to select the next channel)
- PREVIOUS CHANNEL (to select the previous channel)
- LIST CHANNEL (to hear a list of available stations)
- SELECT NAME (to hear the name of a station)
- RADIO MENU (to switch to the radio menu)
- MAIN MENU (to switch to the main menu)

Disc
To switch to the disc mode say DISC.

In this mode you may say the following commands:

- TRACK (1-250) (to change the track)
- NEXT TRACK (to play the next track)
- DISC NUMBER (1-6) (to change the disc)
- NEXT DISC (to play the next disc)
- PREVIOUS TRACK (to play the previous track)
- MAIN MENU (to switch to the main menu)

Hard Drive
To switch to the HDD mode say HARD DRIVE.

In this mode you may say the following commands:

- TRACK (1-250) (to change the track)
- NEXT TRACK (to play the next track)
- PREVIOUS TRACK (to play the previous track)
- MAIN MENU (to switch to the main menu)

VES™
To switch to the VES™ mode say V E S.

In this mode you may say the following commands:

- VES
- VES REMOTE LOCK (to lock the VES remote)

Memo
To switch to the voice recorder mode say MEMO.

In this mode you may say the following commands:

- NEW MEMO (to record a new memo)

  During the recording you may press the VR button to stop recording. You continue by saying one of the following commands:

  – SAVE (to save the memo)

  – CONTINUE (to continue recording)

- DELETE (to delete the recording)

- PLAY MEMOS (to play previously recorded memos)

  During the playback you may press the VR button to stop playing memos. You continue by saying one of the following commands:

  - REPEAT (to repeat a memo)
  - NEXT (to play the next memo)
  - PREVIOUS (to play the previous memo)
  - DELETE (to delete a memo)

- DELETE ALL (to delete all memos)

NOTE: Keep in mind that you have to press the VR button first and wait for the beep, before speaking the "barge in" commands.

Navigation
To switch to the navigation mode say NAVIGATION.

NOTE: Not all commands will be available at all times, depending upon the system context.

NOTE: Read the navigation chapter first, to help you understand the functionality of the available commands.

You may say:

- DESTINATION ENTRY
  - GUIDE ME TO A NAME
  - STREET ADDRESS
    - INPUT COUNTRY
    - INPUT STATE
    - INPUT CITY NAME
    - INPUT STREET NAME
    - INPUT HOUSE NUMBER
  - INTERSECTION

- POI
  - FIND NEARBY POI
  - FIND POI NEAR DESTINATION
  - FIND WITHIN A CITY
  - INPUT PHONE NUMBER
  - SELECT POI ICONS
- ADVANCED INPUT
  - INPUT ZIP CODE
  - INTERSECTION
  - CANCEL DESTINATION ENTRY
- RECENT DESTINATIONS

- ROUTING OPTIONS
  - GO
  - STOP ROUTING
  - MUTE GUIDANCE
  - REPEAT GUIDANCE
  - CHANGE METHOD
    - FASTER ROUTE
    - SHORTER ROUTE
- TRAVEL INFO
- MAP OPTIONS
  - MAP
  - ZOOM IN
  - ZOOM OUT
- ADDRESS BOOK
  - NEW ENTRY

- NAVIGATE TO A NAME
- DELETE
- ERASE ALL

System Setup
To switch to the system setup say SETUP.

You can say:

- LANGUAGE
  - ENGLISH
  - SPANISH
  - FRENCH
- VOICE TRAINING
- HELP SCREEN
  - ON
  - OFF
- TUTORIAL

Voice Training
For users experiencing difficulty with the system recognizing their voice commands or numbers, the UConnect® system Voice Training feature may be used.

1. Press the VR button.
2. Say VOICE TRAINING.

This will train your own voice to the system and will improve recognition.

Repeat the words and phrases when prompted by the UConnect® System. For best results, the Voice Training session should be completed when the vehicle is parked, engine running, all windows closed, and the blower fan switched off.

This procedure may be repeated with a new user. The system will adapt to the last trained voice only.

If the system does not understand the words VOICE TRAINING:

1. Press the SETUP button.

2. Select Voice Recognition to access the Voice Recognition menu.

NOTE: Voice Training does not alter the capability of the system to recognize other people's voices. It gives the recognition system additional information about your voice.

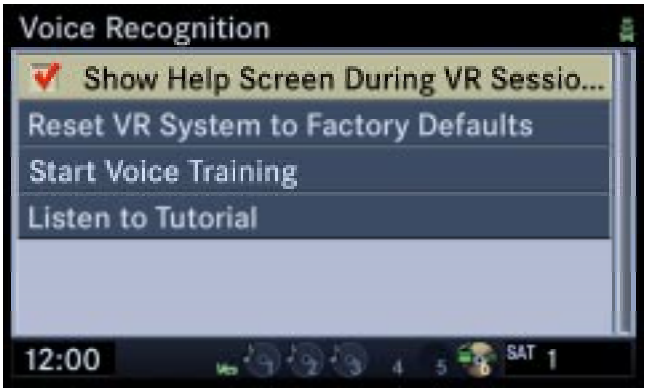

* Select Show Help Screens During VR Sessions to show or hide the help screens when using the speech dialog system.

- Select Reset VR System to Factory Defaults when you would like to restore the Voice recognition system to factory default settings.

- Select Start Voice Training to train the voice recognition system.
- Select Listen to Tutorial to hear instructions on voice training.

NOTE: With rolled down windows, the system performance may be compromised.

In a convertible vehicle, the system performance may be compromised with roof top down.

The Rear view mirror top should be at least 1/2 inch below the overhead console.

HANDS FREE COMMUNICATION (UConnect®) (IF EQUIPPED)

UConnect®

UConnect™ is a voice-activated, hands-free, in-vehicle communications system.

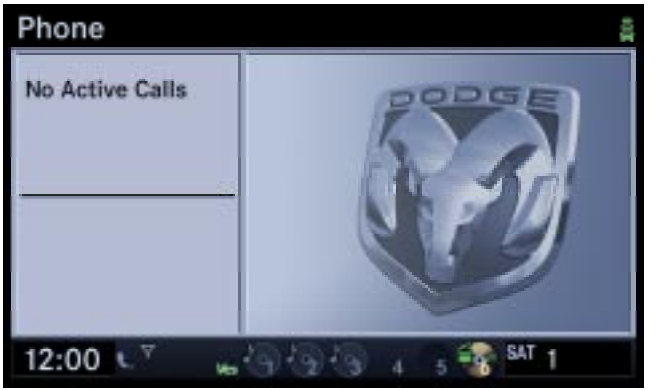

The UConnect® system is fully integrated with the vehicles audio system. The radio display will be used for visual prompts from the UConnect® system such as phone battery status, signal strength, caller ID, and call type.

NOTE: Your phone may not support all available UConnect® features.

UConnect® Overview

UConnect® is a voice-activated, hands-free, in vehicle communications system. UConnect® allows you to dial a phone number with your cellular phone using simple voice commands (e.g., "Call" … "Jim" …Work" or "Dial" … "248-555-1212"). Your cellular phone's audio is transmitted through your vehicle's audio system; the system will automatically mute your radio when using the UConnect® system.

Compatible Phones

See the UConnect® site on http://www.chrysler.com/mygig/ for a current list of compatible cellular phones and any limitations your phone might have.

WARNING!

Any voice commanded system should only be used in safe driving conditions and your attention should be kept on the road ahead.

If your cellular phone supports a different profile (e.g., Headset Profile), you may not be able to use any UConnect® features. Refer to your cellular service provider or the phone manufacturer for details.

The UConnect® system is fully integrated with the vehicle's navigation radio audio system. The volume of the UConnect® system can either be adjusted from the radio volume CENTER CONTROL knob, or from the steering wheel radio control, if so equipped.

The radio display will be used for visual prompts from the UConnect® system such as "Incoming Call", duration of the call, or caller ID.

UConnect® allows you to transfer calls between the system and your cellular phone as you enter or exit your vehicle, and enables you to mute the system's microphone for private conversations.

The UConnect® phonebook enables you to store up to 500 names and four numbers per name.

Bluetooth®

This system is driven through your Bluetooth® Hands-Free profile cellular phone. UConnect® features Bluetooth® technology – the global standard that enables different electronic devices to connect to each other without wires or a docking station, so UConnect works no matter where you stow your cellular phone (be it your purse, pocket, or briefcase), as long as your phone is turned on and has been paired to the vehicle's UConnect® system. The UConnect® system allows up to seven cellular phones to be linked to the system. Only one linked (or paired) cellular phone can be used with the system at a time.

See http://www.bluetooth.org for more information on Bluetooth®.

UConnect® Microphone

The rearview mirror contains the microphone for the system and the radio has the two control buttons that will enable you to access the system.

Please remember, the UConnect® system works best when you talk in a normal conversational tone, as if speaking to some one sitting eight feet away from you.

Say phone numbers as you normally would with a pause between the sets of digits. Speak aloud names as you would normally.

If the system does not recognize one of your commands, you will be prompted to repeat it.

If you have trouble with recognition, you should press the VR button, then say Voice Training. This will train your own voice to the system and will improve recognition.

You may always exit the system by saying CANCEL. Other universal commands include HELP and MAIN MENU.

Operations
Voice commands can be used to operate the UConnect® system and to navigate through the UConnect® menu structure. Voice commands are required after most UConnect® system prompts. You will be prompted for a specific command and then guided through the available options.

UConnect® button
When you press the UConnect® button you will hear the word UConnect® followed by a BEEP. The beep is your signal to give a command.

NOTE: If nothing is said within a few seconds, the system will present a list of menu options.

Listen to the choices and give your command after the beep.

Barge In – Overriding Prompts
The 'Voice Recognition' button can be used when you wish to skip part of a prompt and issue your voice recognition command immediately. For example, if a prompt is playing "Would you like to pair a phone, clear a…," you could press the 'VR button and say "Pair a Phone" to select that option without having to listen to the rest of the voice prompt.

Pressing the VR button while the system is speaking is known as "barging-in". Barging-in must be done with the VR button.

Help Command

If you need assistance at any prompt or if you want to know what your options are at any prompt, say "Help" following the beep. The UConnect® system will play all the options at any prompt if you ask for help.

To activate the UConnect® system from idle, simply press the UConnect® button and follow audible prompts for directions. All UConnect® system sessions begin with a press of the UConnect® button.

Cancel Command

At any prompt, after the beep, you can say "Cancel" and you will be returned to the main menu. However, in a few instances the system will take you back to the previous menu.

Pair (Link) to a Cellular Phone

To begin using your UConnect® system, you must pair your compatible Bluetooth® enabled cellular phone (refer to "Introduction" section to learn about the phone type). To complete the pairing process, you will need to reference your cellular phone owner's manual. One of the following vehicle specific websites may also provide detailed instructions for pairing with the brand of phone that you have:

www.chrysler.com/uconnect or www.dodge.com/uconnect or www.jeep.com/uconnect

Phone pairing can either be done using the setup menu (see Getting Started section in this manual) or using voice commands.

Pairing will walk you through a series of steps that will establish a connection between your handset and the UConnect® system in the vehicle.

Once set up, you do not need to re- pair your phone with each use. However, every new phone must be paired before it can be used.

The following are general phone to UConnect® System voice pairing instructions:

1. Press the UConnect® button to begin.

2. Wait for the beep.

3. Say PHONE PAIRING.

4. When prompted, after the beep, say PAIR A PHONE and follow the audible prompts.

5. You will be asked to say a four-digit pin number which you will later need to enter into your cellular. You can enter any four-digit pin number. You will not need to remember this pin number after the initial pairing process.

6. The UConnect® system will then prompt you to begin the cellular phone pairing process on your cellular phone. Before attempting to pair phone, please see your cellular phone's user manual (Bluetooth section) for instructions on how to complete this step.

7. For identification purposes, you will be prompted to give the UConnect® system a name for your cellular phone. Each cellular phone that is paired should be given a unique phone name.

8. You will then be asked to give your cellular phone a priority level between 1 and 7, 1 being the highest priority.

You can pair up to seven cellular phones to your UConnect® system. However, at any given time, only one cellular phone can be in use, connected to your UConnect® System. The priority allows the UConnect® system to know which cellular phone to use if multiple cellular phones are in the vehicle at the same time.

For example, if priority 3 and priority 5 phones are present in the vehicle, the UConnect® system will use the priority 3 cellular phone when you make a call. You can select to use a lower priority cellular phone at any time (refer to "Advanced Phone Connectivity" section).

Dial by Saying a Number

1. Press the UConnect® button to begin.

2. Wait for the beep.

3. Say DIAL.

4. When prompted, after the beep, say the number you want to call.

For example, you can say “234-567-8901.” The phone number that you enter must be of valid length and combination. Based on the Country in which the vehicle was purchased, the UConnect™ limits the user from dialing invalid combination of numbers. For example, in USA, 234-567-890 is nine digits long, which is not a valid USA phone number - the closest valid phone number has ten digits.

5. The UConnect® system will ask you to confirm the name and then dial the corresponding phone number, which will appear in the display of the navigation radio.

Call by Saying a Name

1. Press the UConnect® button to begin.

2. Wait for the beep.

3. Say CALL.

4. When prompted, after the beep, say the name of the person you want call.

For example, you can say “John Doe,” where John Doe is a previously stored name entry in the UConnect® phonebook. Refer to section “Add names to Phonebook,” to learn how to store a name in the phonebook.

5. The UConnect® system will ask you to confirm the name and then dial the corresponding phone number, which will appear in the display of the navigation radio.

Phone Book

Accessing the phone book can either be done using the touch screen (see Address Book section in this manual) or using voice commands.

The UConnect® PHONE BOOK accesses the same database as the navigation radios ADDRESS BOOK.

Add Names to Phonebook

Adding names to phonebook is recommended when the vehicle is not in motion.

1. Press the UConnect® button to begin.
2. Wait for the beep.
3. Say PHONEBOOK.
4. When prompted, after the beep, say NEW ENTRY.

Use of long names helps the voice recognition and is recommended. For example, say “Robert Smith” or “Robert” instead of “Bob.”

5. When prompted, enter the number designation (e.g.: “Home,” “Work,” “Mobile,” or “Pager”). This will allow you to store multiple numbers for each phonebook entry, if desired.
6. When prompted, confirm the phone number for the phonebook entry that you are adding.
7. After you are finished adding an entry into the phonebook, you will be given the opportunity to add more phone numbers to the current entry or to return to the main menu.

The navigation radio will allow you to enter up to 500 names in the phone book with each name having addresses, and up to four associated phone numbers, and designations.

Voice Tags

In step 4 of the Add Names to Phonebook section, the navigation radio is recording your voice. The recording is called Voice Tag. You may edit, delete, or listen to the voice tag in the contact information menu (refer to the Address Book section in this manual for more details).

NOTE: Only voice tags are saved in regards to the currently selected system language setting. If you switch the language, your voice tag may not be available.

Edit Phonebook Entries

Editing names in the phonebook is recommended when the vehicle is not in motion.

1. Press the UConnect® button to begin.
2. Wait for the beep.
3. Say PHONEBOOK.
4. When prompted, after the beep, say EDIT ENTRY.
5. You will then be asked for the name of the phonebook entry that you wish to edit.
6. Next, choose the number designation (home, work, mobile, or pager) that you wish to edit.
7. When prompted, recite the new phone number for the phonebook entry that you are editing.

After you are finished editing an entry in the phonebook, you will be given the opportunities to edit another entry in the phonebook, call the number you just edited, or return to the main menu.

“Phonebook Edit” can be used to add another phone number to a name entry that already exists in the phonebook. For example, the entry John Doe may have a mobile and a home number, but you can add John Doe’s work number later using the “Phonebook Edit” feature.

Delete Phonebook Entry

1. Press the UConnect® button to begin.

2. Wait for the beep.

3. Say PHONEBOOK.

4. When prompted, after the beep, say DELETE ENTRY.

5. After you enter the Phonebook Delete menu, you will then be asked for the name of the entry that you wish to delete.

You can either say the name of a phonebook entry that you wish to delete or you can say "List Names" to hear a list of the entries in the phonebook from which you choose.

6. To select one of the entries from the list, press the "Voice Recognition" button while the UConnect® system is speaking the desired entry and say DELETE.

After you enter the name, the UConnect® system will ask you which designation you wish to delete: home, work, mobile, pager or all.

7. Say the designation you wish to delete.

Delete/Erase "All" Phonebook Entries

1. Press the UConnect® button to begin.

2. Wait for the beep.

3. Say PHONEBOOK.

4. When prompted, after the beep, say ERASE ALL.

5. The UConnect® system will ask you to verify that you wish to delete all the entries from the phonebook.

After confirmation, the phonebook entries will be deleted.

List All Phonebook Names

1. Press the UConnect® button to begin.
2. Wait for the beep.
3. Say PHONEBOOK.
4. When prompted, after the beep, say LIST NAMES.

The UConnect® system will play the names of all the phonebook entries.

5. To call one of the names in the list, press the "Voice Recognition" button during the playing of the desired name and say CALL.

NOTE: You can also exercise "Edit" or "Delete" operations at this point.

6. The UConnect® system will then prompt you as to the number designation you wish to call.
7. The selected number will be dialed.

Phone Call Features

The following features can be accessed through the UConnect® system if the feature(s) are available on your cellular service plan. For example, if your cellular service plan provides three-way calling, this feature can be accessed through the UConnect® system. Check with your cellular service provider for the features that you have.

Answer or Reject an Incoming Call:

When no Call Currently in Progress: When you receive a call on your cellular phone, the UConnect® system will interrupt the vehicle audio system, and will ask if you would like to answer the call.

1. Press the UConnect® button to accept the call.
2. To reject the call, press and hold the UConnect® button until you hear a single beep indicating that the incoming call was rejected.

When another Call in Progress If a call is currently in progress and you have another incoming call, you will hear the same network tones for call waiting that you normally hear when using your cell phone.

Press the UConnect® button to place the current call on hold and answer the incoming call.

NOTE: The UConnect® system compatible phones in market today do not support rejecting an incoming call when another call is in progress. Therefore, the user can only either answer an incoming call or ignore it.

Make a Second Call
While Another Call is in Progress:

1. To make a second call while you are currently in a call, press the VR button.

2. Say DIAL or CALL followed by the phone number or phonebook entry you wish to call.

3. The first call will be on hold while the second call is in progress. To go back to the first call, refer to section "Toggling Between Calls."

4. To combine two calls, refer to section "Conference Call."

Place / Retrieve a Call from Hold

1. To put a call on hold, press the UConnect® button until you hear a single beep which will indicate that the call has been placed on hold.

2. To bring the call back from hold, press and hold the 'Phone' button until you hear a single beep.

Toggle between Calls
If two calls are in progress (one active and one on hold), press the UConnect® button until you hear a single beep indicating that the active and hold status of the two calls have switched. Only one call can be placed on hold at one time.

Conference Call

When two calls are in progress (one active and one on hold), press and hold the UConnect® button until you hear a double beep indicating that the two calls have been joined into one conference call.

Three-Way Call

1. To initiate three-way calling, press the VR button while a call is in progress.

2. Make a second phone call as described in section "Making a Second Call while Current Call in Progress."

3. After the second call has established, press and hold the UConnect® button until you hear a double beep indicating that the two calls have been joined into one conference call.

Call Termination

1. To end a call in progress, momentarily press the UConnect® button.

Only the active call/s will be terminated and if there is a call on hold, it will become the new active call.

2. If the active call is terminated by the far end, a call on hold may not become active automatically. This is cell phone dependent.

3. To bring the call back from hold, press and hold the UConnect® button until you hear a single beep

Redial

1. Press the UConnect® button to begin.

2. Wait for the beep.

3. Say REDIAL.

4. The UConnect® system will call the last number that was dialed on your cellular phone.

NOTE: This may not be the last number dialed from the UConnect® system.

Call Continuation

Call continuation is progression of a phone call on UConnect® system after the vehicle ignition key has been switched to off. Call continuation functionality available on the vehicle can be any one of three types:

1. After ignition key is switched off, a call can continue on the UConnect® system either until the call ends or until the vehicle battery condition dictates cessation of the call on the UConnect® system and transfer of the call to the mobile phone.

2. After ignition key is switched to off, a call can continue on the UConnect® system for certain duration, after which the call is automatically transferred from the UConnect® system to the mobile phone.

3. An active call is automatically transferred to the mobile phone after ignition key is switched to off.

Emergency Assistance

If you are in an emergency and the mobile phone is reachable:

1. Pick up the phone and manually dial the emergency number for your area.

2. If the phone is not reachable and the UConnect® system is operational, you may reach the emergency number as follows:

3. Press the UConnect® button to begin.

4. Wait for the beep.

5. Say EMERGENCY.

The UConnect® system will instruct the paired cellular phone to call the emergency number.

NOTE: The emergency number dialed is based on the Country where the vehicle is purchased (911 for USA and Canada, and 060 for Mexico). The number dialed may not be applicable with the available cellular service and area.

NOTE: The UConnect® system does slightly lower your chances of successfully making a phone call as to that for the cell phone directly.

WARNING!

Your phone must be turned on and paired to the UConnect® system to allow use of this vehicle feature in emergency situations when the cell phone has network coverage and stays paired to the UConnect® system.

Towing Assistance

If you need towing assistance,

1. Press the UConnect® button to begin.
2. Wait for the beep.
3. Say TOWING ASSISTANCE.

NOTE: The Towing Assistance number dialed is based on the Country where the vehicle is purchased (800-528-2069 for USA, 877-213-4525 for Canada, 55-14-3454 for Mexico city and 800-712-3040 for outside Mexico city in Mexico).

Please refer to the 24-Hour Towing Assistance coverage details in the Chrysler Corporation 24-Hour Towing Assistance Program Guide.

Paging

To learn how to page, refer to section “Working with Automated Systems.” Paging works properly except for

pagers of certain companies which timeout a little too soon to work properly with the UConnect® system.

Voice Mail Calling

To learn how to access your voice mail, refer to section "Working with Automated Systems.

Working with Automated Systems

This method is designed to be used in instances where one generally has to press numbers on the cellular phone keypad while navigating through an automated telephone system.

You can use your UConnect® system to access a voicemail system or an automated service, such as, paging service or automated customer service. Some services require immediate response selection, in some instances, that may be too quick for use of UConnect® system.

When calling a number with your UConnect® system that normally requires you to enter in a touch-tone sequence on your cellular phone keypad, you can push the VR button and say the sequence you wish to enter followed by the word "Send."

For example, if required to enter your pin number followed with a pound 3 7 4 6 #

1. Press the VR button.

2. Say 3 7 4 6 # SEND

Saying a number, or sequence of numbers, followed by SEND is also to be used to navigate through an automated customer service center menu structure and to leave a number on a pager.

Turning Confirmation Prompts On/Off

Turning confirmation prompts off will stop the system from confirming your choices (e.g. the UConnect® system will not repeat a phone number before you dial it).

1. Press the UConnect® button to begin.

2. Wait for the beep.

3. Say UCONNECT SETUP.

4. After the "Ready" prompt and the following beep, say CONFIRMATION PROMPTS.

5. The UConnect® system will play the current confirmation prompt status and you will be given the choice to change it.

Phone and Network Status Indicators

If available on the radio and/or on a premium display such as the instrument panel cluster, and supported by your cell phone, the UConnect® system will provide notification to inform you of your phone and network status when you are attempting to make a phone call using UConnect®. The status is given for roaming, network signal strength, phone battery strength, etc.

Dial Using the Cellular Phone Keypad

You can dial a phone number with your cellular phone keypad and still use the UConnect® system (while dialing via the cell phone keypad, the user must exercise caution and take precautionary safety measures). By dialing a number with your paired Bluetooth® cellular phone, the audio will be played through your vehicle's audio system. The UConnect® system will work the same as if you dial the number using voice recognition.

NOTE: Certain brands of mobile phones do not send the dial ring to the UConnect® system to play it on the vehicle audio system, so you will not hear it. Under this situation, after successfully dialing a number, the user may feel that the call did not go through even though the call is in progress. Once your call is answered, you will hear the audio.

Mute/Un-mute (Mute off)
When you mute the UConnect® system, you will still be able to hear the conversation coming from the other party, but the other party will not be able to hear you.

In order to mute the UConnect® system:

1. Press the UConnect™ button to begin.
2. Wait for the beep.
3. Say MUTE or MUTE ON.

In order to unmute the UConnect® system:

1. Press the UConnect® button to begin.
2. Wait for the beep.
3. Say UNMUTE or MUTE OFF.

Advanced Phone Connectivity

Transfer Call to Cellular Phone
The UConnect® system allows ongoing calls to be transferred to your cellular phone without terminating the call.

To transfer an ongoing call from the UConnect® system to your UConnect® paired cellular.

1. Press the VR button (bargin-in).
2. Say TRANSFER CALL

The navigation radio starts playing the last used audio source, and you can continue your call on the cellphone.

Transfer Call to UConnect® System
If you have an ongoing call on a cell phone which was paired with the UConnect™ system before, and it´s call was transferred to the cell phone. The UConnect® system

allows ongoing calls to be transferred back to the UConnect® system without terminating the call.

To transfer an ongoing call from your UConnect® paired cell phone to the UConnect® system.

1. Press the VR button.
2. Say TRANSFER CALL

The navigation radio transfers the call immediately, and you can continue your call on the UConnect® system.

Automatic Transfer Call to UConnect® System

If you have an ongoing call on a cell phone which was paired with the UConnect® System before, and the navigation radio is off, turn on the ignition and allow the UConnect® system to automatically transfer the call. This may take a few seconds.

List All Paired Cellular Phone Names

1. Press the UConnect® button to begin.
2. Wait for the beep.
3. Say UCONNECT SETUP.
4. After the following beep, say PHONE PAIRING.
5. After the following beep, say LIST PAIRED PHONES.
6. The UConnect® system will play the phone names of all paired cellular phones in order from the highest to the lowest priority.

To “select” or “delete” a paired phone being announced, press the VR button and say SELECT or DELETE. Also, see next two sections for alternate way of doing this.

Select another Cellular Phone

You may select phones in the Paired Devices menu. (Refer to the Getting Started section in this manual for more details).

This feature allows you to select and start using another phone with the UConnect® system.

The phone must have been previously paired to the UConnect® system that you want to use it with.

1. Press the UConnect® button to begin.
2. Wait for the beep.
3. Say UCONNECT SETUP.
4. After the following beep, say SELECT PHONE.

The phone names along with priority numbers will be announced.

5. When prompted say the priority number of the cellular phone you wish to select.
6. You can also press the VR button anytime while the list is being played.
7. Say the priority number choose select of the phone that you wish to select.

The selected phone will be used for the next phone call. If the selected phone is not available, the UConnect® system will return to using the highest priority phone present in or near (approximately with in 30 feet) the vehicle.

Delete UConnect® Paired Cellular Phones

You may delete phones in the Paired Devices menu. (Refer to the Getting Started section in this manual for more details).

This feature allows you to delete a phone from the UConnect® system.

The phone must have been previously paired to the UConnect® system that you want to delete it from.

1. Press the UConnect® button to begin.

2. Wait for the beep.

3. Say UCONNECT SETUP.

4. After the following beep, say DELETE PHONE.

The phone names along with priority numbers will be announced.

5. When prompted say the priority number of the cellular phone you wish to delete.

6. You can also press the VR button anytime while the list is being played.

7. Say the priority number choose select of the phone that you wish to delete.

Things You Should Know About Voice Recognition (VR)

- Always wait for the beep before speaking
- Speak normally, without pausing, just as you would speak to a person sitting approximately eight (8) feet away from you.
- Make sure that no one other than you is speaking during a voice recognition period.
- Performance is maximized under
  - low-to-medium blower setting
  - low-to-medium vehicle speed
  - low road noise
  - smooth road surface
  - fully closed windows

- dry weather condition.

- Even though the system is designed for users speaking in North American English, French and Spanish accents, the system may not always work for some.
- When navigating through an automated system, such as, voice mail, or when sending a page, at the end of speaking the digit string, make sure to say SEND.
- Storing names in phonebook when vehicle is not in motion is recommended.
- It is not recommended to store similar sounding names in the UConnect® phonebook.
- UConnect® phonebook name tag recognition rate is optimized for the person who stored the name in the phonebook.
- You may say “O” (letter “O”) for “0” (zero). “800” may be spoken EIGHT ZERO ZERO.
- Even though international dialing for most number combinations is supported, some shortcut dialing number combinations may not be supported.

Far End Audio Performance

- Audio quality is maximized under
  - low-to-medium blower setting,
  - low-to-medium vehicle speed,
  - low road noise,
  - smooth road surface,
  - fully closed windows, and
  - dry weather condition.
  - operation from driver seat.

- Performance, such as, audio clarity, echo. and loudness to a large degree, rely on the phone and network, and not the UConnect® system.
- Echo at far end can sometime be reduced by lowering the in-vehicle audio volume.

Bluetooth® Communication Link
Cellular phones have been found to occasionally loose connection to the UConnect® system. When this happens, the connection can generally be re-established by switching the phone off / on. Your cell phone is recommended to remain in Bluetooth® "on" mode.

Power-Up
After switching ignition key from off to either ON or ACC position, or after a language change reset, you must wait a few seconds prior to using the system.

Voice Tree - Main Menu
To initiate UConnect®, press the UConnect® button

In this menu you may say the following commands:

- CALL
  - NAME
  - NUMBER
  - EMERGENCY
  - TOWING ASSISTANCE
- DIAL
  - NAME
  - NUMBER
  - EMERGENCY
  - TOWING ASSISTANCE

- PHONE BOOK
  - NEW ENTRY
  - EDIT ENTRY
  - LIST NAMES
  - DELETE
  - ERASE ALL
- REDIAL
- EMERGENCY
- TOWING ASSISTANCE
- UCONNECT SETUP

Voice Tree - Setup Menu
To initiate UConnect®, press UConnect® Phone button. After the system beep, say UCONNECT SETUP.

In this menu you may say the following commands:

- PHONE PAIRING
  - PAIR A PHONE
  - DELETE PHONE
  - LIST PAIRED PHONES
- CONFIRMATION PROMPTS
  - ON
  - OFF
- SELECT PHONE
- EMERGENCY
- TOWING ASSISTANCE

NAVIGATION

General Notes

System Overview

Your navigation system receives GPS signals from up to 16 satellites to display the position of your vehicle. Map and database information is supplied through a hard disk drive. A gyroscope and the vehicles speed sensor enable the system to display the present vehicle position even in locations where GPS signals may be blocked.

When you input a destination, the navigation system uses map data from the hard disk drive to quickly calculate a route. As you drive along your chosen route, you are guided with pictorial displays and voice prompts.

Navigation Software

This navigation radio requires digital data from a Navigation Database. The data in the Navigation Database is licensed from Navigation Technologies®. Not all roads are digitized.

Software Updates

Visit http://www.chrysler.com/mygig/ website or contact your Chrysler Dealership for the latest available software.

Navigation Database

The navigation unit is provided with a navigation database on the internal hard drive. The database contains data for the Continental USA, some of the major cities in Canada, Alaska, parts of Hawaii, and Puerto Rico.

WARNING!

Drive with caution, paying attention to the road, obeying all traffic laws!

System Limitations

The map data that is included with your system is the most recent available at the time of production. Because of changes in streets, neighborhoods, and business locations, there may be situations where the navigation system is not able to route you to your desired destination by the entry method you have chosen. If this occurs, choose another entry method.

Selecting Navigation Mode Press the NAV button to toggle between Navigation MAIN MENU and Navigation MAP.

Navigation Main Menu

Selecting NAV Main Menu

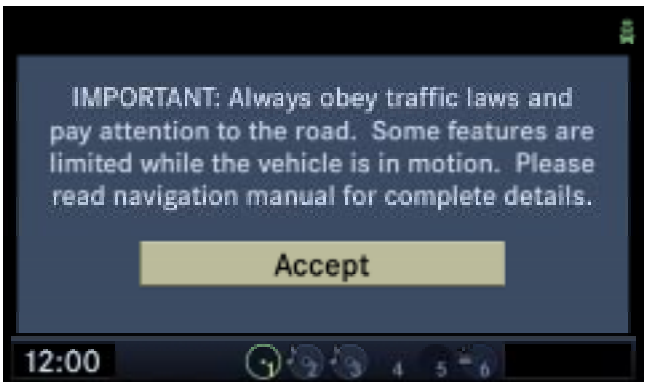
IMPORTANT: Always obey traffic laws and pay attention to the road. Some features are limited while the vehicle is in motion. Please read navigation manual for complete details.
Accept
12:00

1. If not already done, press the ACCEPT button to agree to the Navigation Disclaimer.

2. Press the NAV button to switch to the navigation menu and toggle between Map Viewer and Navigation Main Menu.

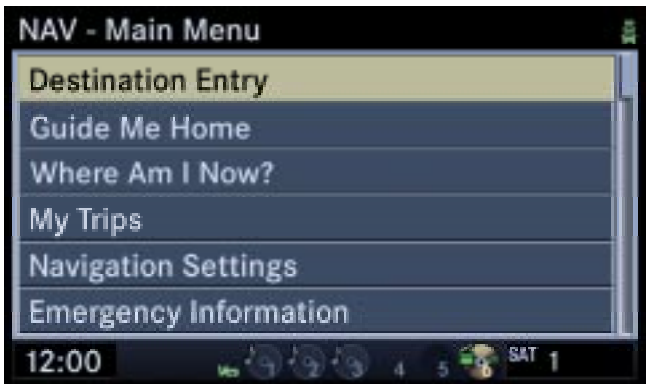

- Destination Entry

  Select this function when you want to program a destination. (See the Destination Input section for details.)

- Guide Me Home

  Select this function when you want to route to your home destination. (See the Guide Me Home section for details.)

- Where Am I Now?

  Select this function when you want to find out where you are, and when you need to search for available points of interest near to your current vehicle position. (See the Where Am I Now section for details.)

- My Trips

  Select this function when you want to program or save trips with multiple destinations. (See the My Trips section for details.)

- NAV Settings

  Select this function when you want to adjust the settings of the navigation system. (See the Navigation Default Settings section for details.)

- Emergency Information

  Select this function when you want to route to an emergency facility near to the current location of your vehicle. You may list fire stations, police stations, hospitals and Chrysler dealerships. (See the Emergency Info section for details.)

- My Saved Trails

  Select this function when you want to route to a trail you recorded before. (See the Destination Input section for details.)

Inputting Information

Names (e.g., city names or street names) are entered with a smart speller

It is possible to spell only names contained in the database. Unavailable letters are in a lighter color and are not selectable. If the desired street name is shown completely select CONTINUE to proceed. If there are only a few choices left, you may press the LIST button to display a list of names.

IMPORTANT NOTE: Use the space symbol '_' as a space between words (e.g., NEW_YORK_CITY).

NOTE: Press the DELETE button to delete a misspelled letter or press the NAV button to go back to the navigation main menu. You can also press the BACK button on the faceplate to go to the previous screen.

NOTE: Select ÂÑØ... or @$&... to access special characters, if needed. Select A->a to switch to uppercase, or a->A to switch to lowercase.

WARNING!

For your own safety and the safety of others, it is not possible to use the speller while the vehicle is in motion.

Destination Input

Press the NAV button to access the NAV -Main Menu.

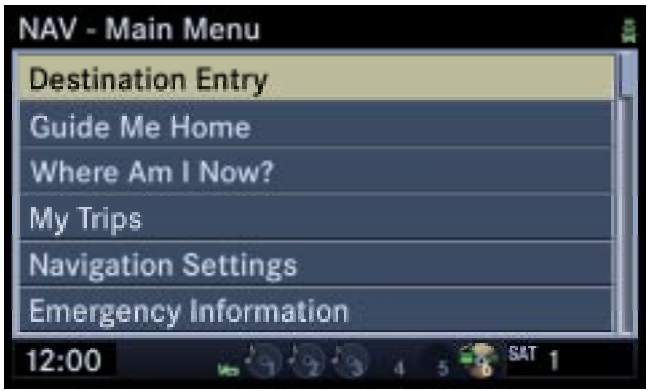

Select Destination Entry to get to the Destination Entry screen.

NOTE: Once you start the destination input you can press the NAV button to cancel the destination input process.

Overview Destination Entry Screen

At this point, you need to decide what type of destination you would like to enter.

A **Street Address** or a street name with house number.

NOTE: If you select a street without knowing a house number, the navigation radio will guide you to the closest end location on the entered street.

Point of Interest allows you to select a destination from a list of locations and public places, or point of interest (POI). Search by place name, by phone number, by category or place type.

Recent Destinations are previously entered addresses or locations.

Use Address Book are previously saved addresses or locations. Review the Address Book section in this manual to learn more about the address book.

My Favorite Places are previously saved addresses or locations. Review the Address Book section in this manual to learn more about favorite places.

Intersection allows you to enter two street names.

Geo Coordinates A geographical coordinate is a coordinate used in geography.

You can determine a geo coordinate with the help of a handheld GPS receiver, a map, or the navigation system.

Point on Map allows quick and easy selection of a destination directly from the Map screen. By selecting a street segment or icon, you can quickly enter a destination without the need to input the city name or street.

Destination Input by Street Address

For this example we will continue by entering the following address 2101 CONSTITUTION AVE NW, WASHINGTON D.C., DC 20037, U.S.A.

1. Select Street Address to get to the Street Address menu.

This menu shows the default country and state settings.

Changing Country

If the COUNTRY is already set to your destination country, continue with Changing State / Province.

If your destination is not in the displayed country,

1. Turn the CENTER CONTROL knob and highlight the country (flag).
2. Press the JOYSTICK.

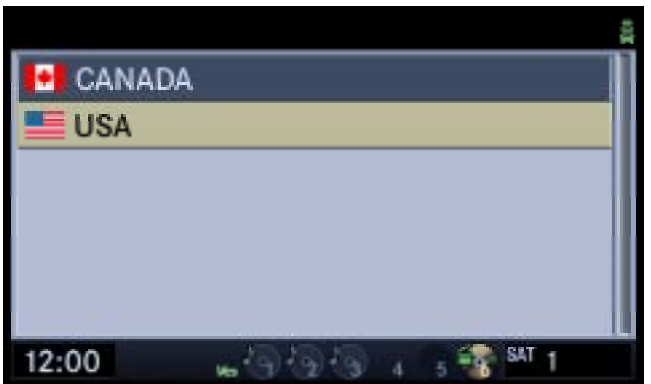

3. Highlight the destination country.
4. Press the JOYSTICK again.

Changing State (US only)

If the state is already set to your destination, continue with Enter a Street Address.

If your destination is not in the displayed state,

1. Turn the CENTER CONTROL knob and highlight the state.
2. Press the JOYSTICK
3. Press the LIST button.
4. Highlight the destination state.

For this example we highlight WASHINGTON D.C. (DC).

5. Press the JOYSTICK again.

Changing Province (Canada only)
If the province is already set to your destination, continue with Enter a Street Address.

If your destination is not in the displayed province,

1. Turn the CENTER CONTROL knob and highlight the province.

2. Press the JOYSTICK.

3. Press the LIST button.

4. Highlight the destination province.

5. Press the JOYSTICK again.

Input Street Name

1. Select the Input Street Name function in the Street Address menu.

2. Enter the C in the speller, the first letter of the street name (CONSTITUTION AVE NW). In the upper right corner, the number of possible roads decreases.

3. Enter the O in the speller, the second letter of the street name (CONSTITUTION AVE NW). In the upper right corner, the number of possible roads decreases more.

4. Press the LIST button to display a list of possible street names. Select CONSTITUTION AVE NW from the list to get to the Input House Number menu.

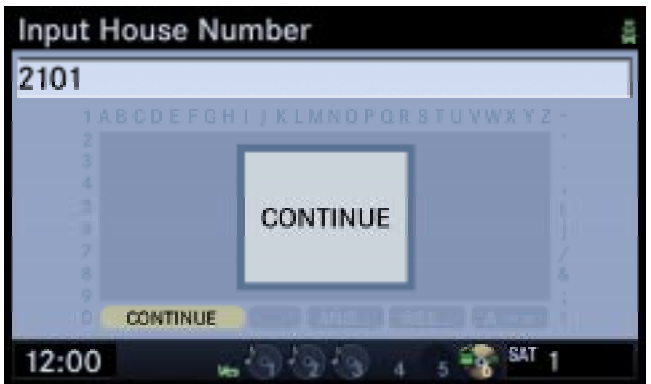

The speller displays only numbers contained in the digital map.

5. In this example we have entered 2101 as the house number. With CONTINUE button selected press the JOYSTICK to get to the City List menu.

NOTE: The city list is only displayed if the entered address exists in more than one city in the navigation database.

6. Select WASHINGTON, DC.

7. Press the JOYSTICK to get to the Confirm Route To screen.

If you do not wish to enter a number, you can select SKIP instead.The navigation system will guide you to a section of the entered street which is the closest to your current location.

In the Confirm Route To screen the navigation radio displays the complete address, a map of the entire route, the distance to the destination, and the current routing method for you to verify.

NOTE: If the displayed address is not the desired address, you can either press the BACK button to step back to the previous screens, press the NAV button to cancel the destination input.

8. Select GO button to activate the route guidance.

To read more about the OPTIONS in this menu, see the NAV Options section of this manual.

Destination by Point of Interest

A point of interest (POI) can be found in different ways. Close to the current vehicle position (POI Local Area), close to the currently active destination (Nearby Destination), within the map database (POI in Map Area), by POI name, by phone number, and within a city.

Input POI Place Name

For this example we will continue by entering Devils Tower National Monument a tourist attraction for a vacation.

1. Select the Point of Interest function in the Destination Entry screen.

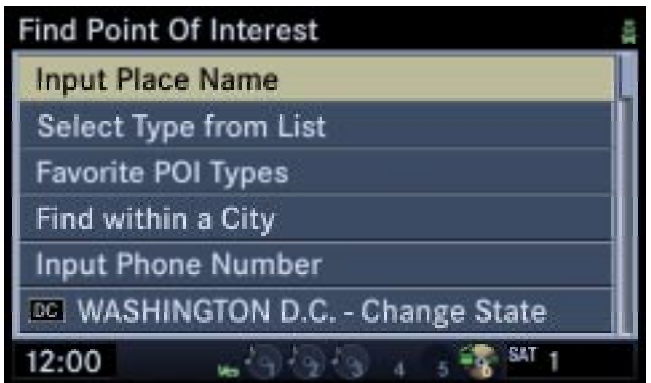

2. Select the Input Place Name function.

3. Enter the name into the speller.

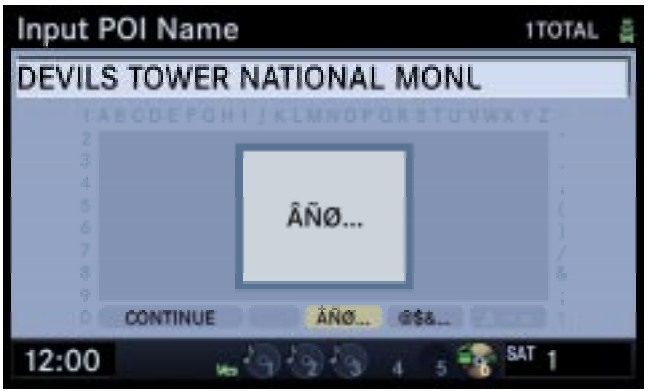

4. Press the JOYSTICK when Continue is highlighted.

5. Confirm the destination.

Select Type from List

For this example we will continue by entering a Gas Station close to the vehicle location.

1. Select the Point of Interest function in the Destination Entry screen.

2. Select the Select Type from List function.

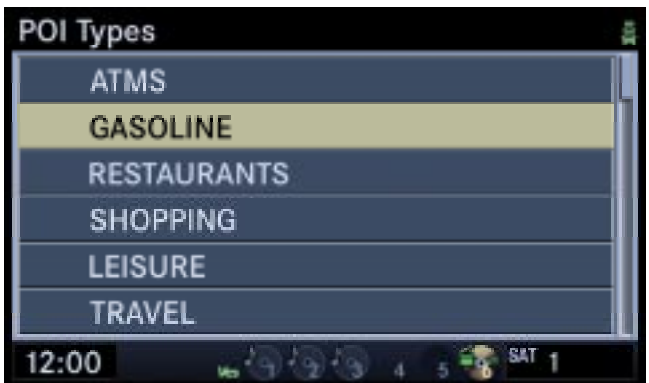

3. Select a POI category. For this example select GASOLINE.

NOTE: Some categories maybe disabled while the vehicle is in motion.

The radio displays a list of gas stations sorted by distance to the current vehicle location.

4. Select a gas station of your choice.

5. Confirm the destination.

Favorite POI Types

NOTE: For your safety, the number of displayed POÍs may be limited in certain screens, while the vehicle is in motion.

For easier access to POÍs while the vehicle is in motion, you may define your own POI category list.

Add a POI Category to the List

For this example we will continue to make the restaurant category a favorite POI type.

1. Select the Point of Interest function in the Destination Entry screen.

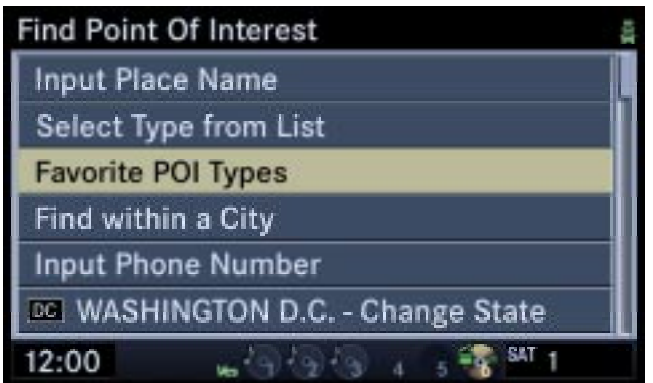

2. Select the Favorite POI Types function.

3. Select the Add Type function.

4. Select the desired category.

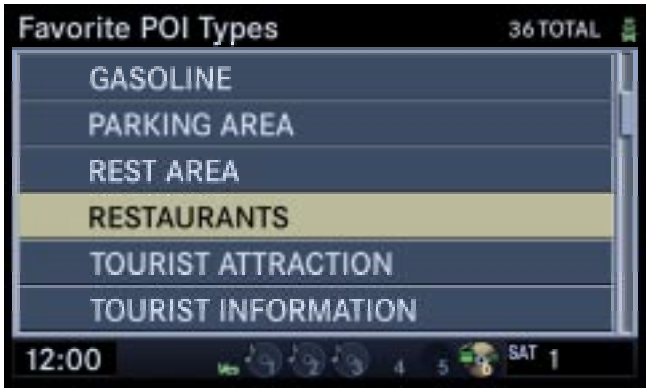

For this example select RESTAURANTS.

At this point the category RESTAURANT was added to the favorite POI type list.

Selecting a Favorite POI Type

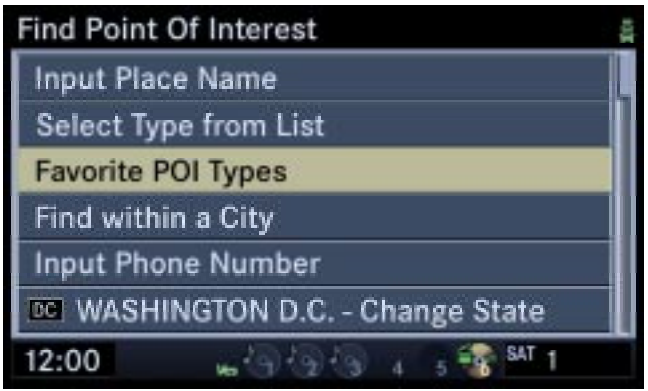

1. Select the Point of Interest function in the Destination Entry screen.

2. Select the Favorite POI Types function.

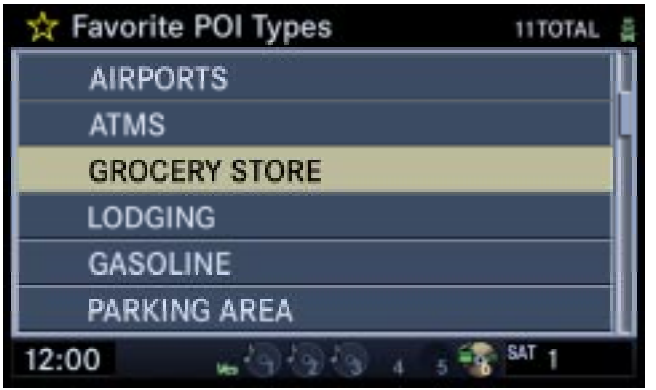

3. Select a category.

4. Select a POI from the list.

Remove a POI Category to the List

1. Turn the CENTER CONTROL knob until the category is highlighted.

2. Press the DELETE button to delete the category from the list.

NOTE: Press and hold the DELETE button for 5 seconds will remove all categories from the list.

3. Select YES.

4. Press the JOYSTICK to confirm.

Find within a City

For this example we will continue by entering the DETROIT MCNAMARA AIRPORT TERMINAL.

1. Select the Point of Interest function in the Destination Entry screen.

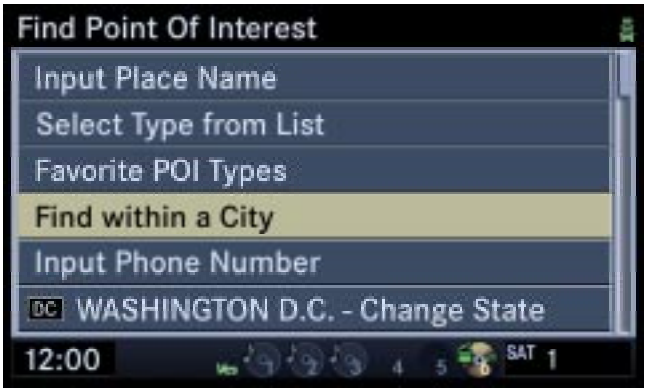

2. Select the Find within a City function.

For this example we enter a city within the country.

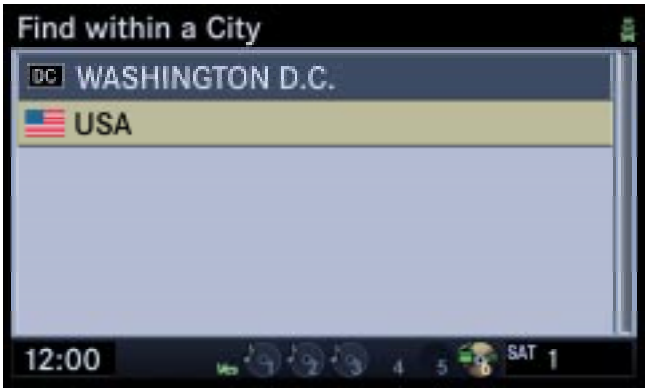

3. Highlight the country, if to enter a city within the country.

You may also highlight the state, if you enter a city within the state.

4. Press the JOYSTICK to confirm your selection.

For this example we enter DETROIT.

5. Enter the city name into the speller.

6. Press the LIST button to display a list of cities.

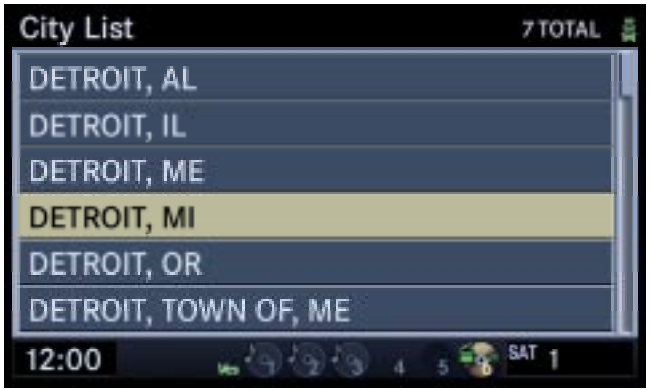

For this example we select DETROIT, MI

7. Select the city from the list.
8. Press the JOYSTICK to confirm the city.

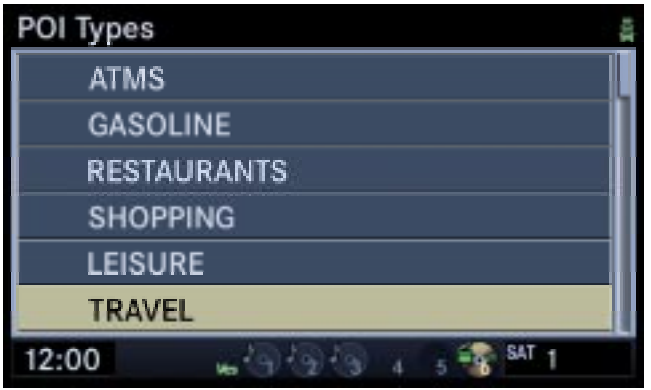

9. For this example we choose the TRAVEL category.

10. Select AIRPORT from the list.

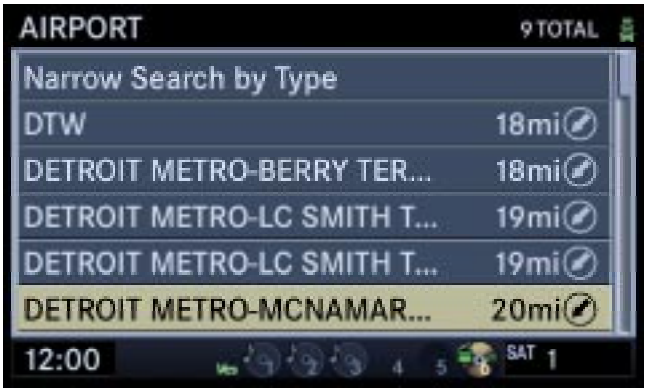

11. Highlight DETROIT METRO-MCNAMARA TERMINAL.

12. Press the JOYSTICK to select the destination.

Input Phone Number

For this example we will continue by entering the phone number of the WHITE HOUSE in Washington, DC.

1. Select the Point of Interest function in the Destination Entry screen.

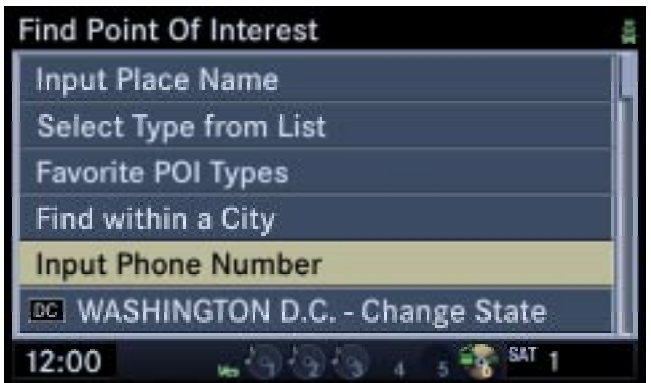

2. Select the Input Phone Number function.

For this example we enter 202-4561414.

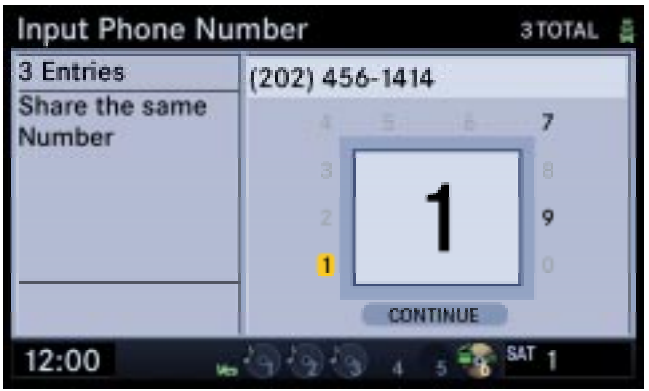

3. Enter the phone number.

4. If more than one POI shares the same number, select CONTINUE.

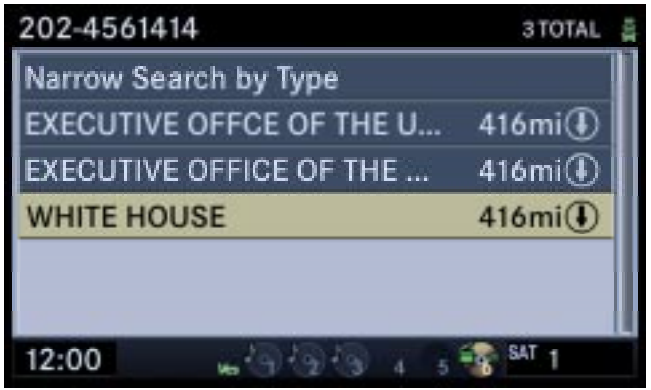

5. Select the desired destination.

6. Press the JOYSTICK to confirm the destination.

Destination Input by Recent Destinations

1. Select the Recent Destinations function in the Destination Entry screen.

2. Select a destination from the list.

3. Press the JOYSTICK to confirm the highlighted destination.

Remove a Destination from Recent Destinations List

1. Select the Recent Destinations function in the Destination Entry screen.
2. Select a destination from the list.
3. Press the DELETE button to delete the list item.

Destination Input by Address Book

1. Select the Use Address Book function in the Destination Entry screen.

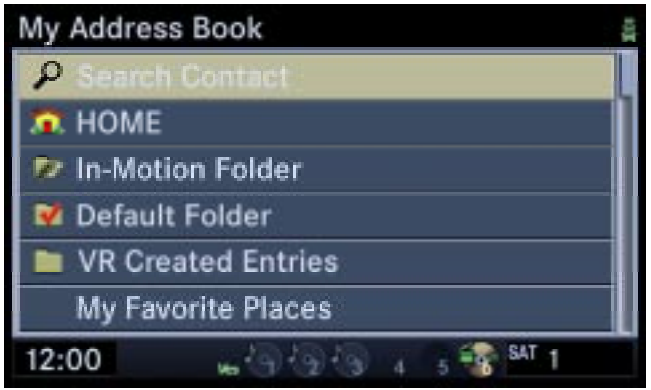

2. Select a folder or select SEARCH to search for the desired contact to enter the destination (see the Address Book section in this manual for more information).

Destination Input by Favorite Places

1. Select the My Favorite Places function in the Destination Entry screen.
2. Select a favorite place from the list.
3. Confirm the selected destination.

NOTE: To fill the favorite places memory, you must save a location as a Favorite Place from the Where Am I Now? menu.

Destination Input by Intersection

For this example we will continue by entering the following intersection: Kaufman Ln and Bridwell Dr, in Louisville, Kentucky.

1. Select Intersection in the Destination Entry screen to get to the Find Intersection menu.

NOTE: If Kentucky is not your default state refer to the change state / province and / or country section to learn how to change state / province and / or country).

2. For this example change the state to Kentucky.

3. Select Input Street Name

4. Enter the Name of the 1st street “Kaufman Ln” into the speller and confirm the name.

The navigation radio will display a list of possible cross streets of the initially entered street.

5. Select “Bridwell Dr” for this example.

If you wish to change your mind and prefer to select a different cross street, you can press the BACK button to select another cross street.

6. Press GO in the Confirm Route To screen to start the route guidance.

Destination Input by City Center

For this example we will plan a route to New York City, NY.

1. Select City Center in the Destination Entry screen.

NOTE: If New York is not your default state refer to the change state / province and / or country section to learn how to change state / province and / or country).

2. For this example change the state to New York

NOTE: If you do not know the name of the state, select Input City Name in Country in step 3.

3. Select Input City Name

4. Enter the Name of the city “New York City” into the speller and confirm the name

5. Press GO in the Confirm Route To screen to start the route guidance.

Destination Input by Geo Coordinate

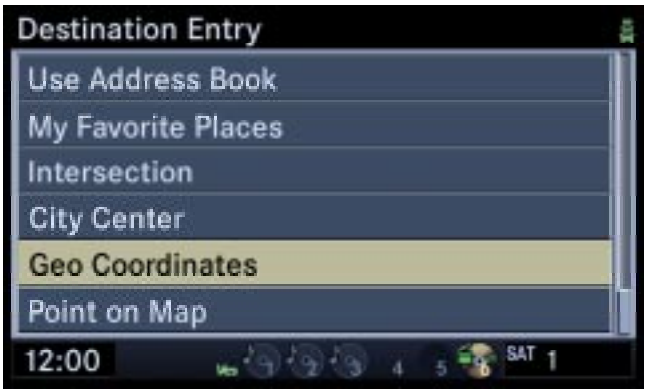

For this example we will plan a route to a park in Michigan.

1. Select Geo Coordinate in the Destination Entry screen.

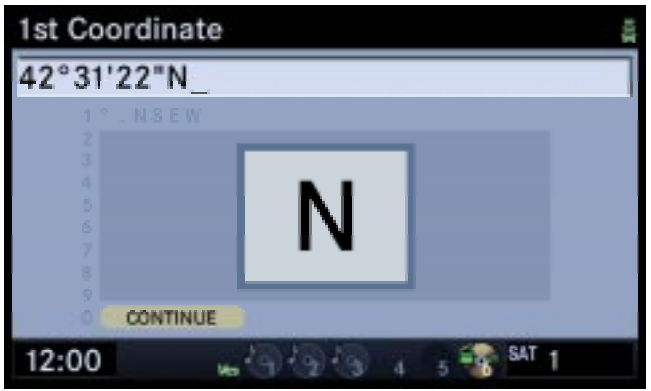

2. Enter the first coordinate 42° 31’ 22” N

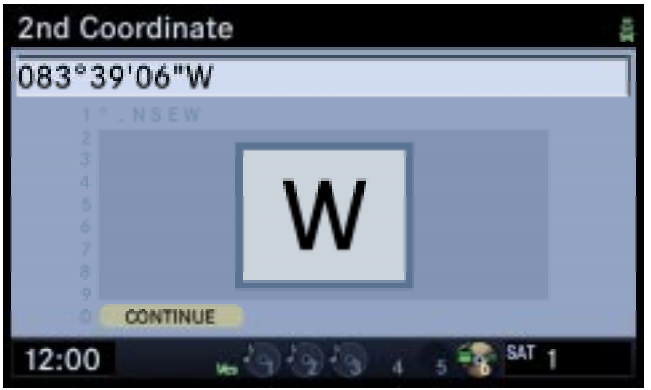

3. Enter the second coordinate 83° 39’ 06” W

4. Press GO in the Confirm Route To screen to start the route guidance.

Destination Input by Point on Map

This feature allows quick and easy selection of a destination directly from the map screen. By selecting a street segment or POI icon, you can quickly enter a destination without the need to input the city name or street.

NOTE: This feature is also available while the vehicle is in motion.

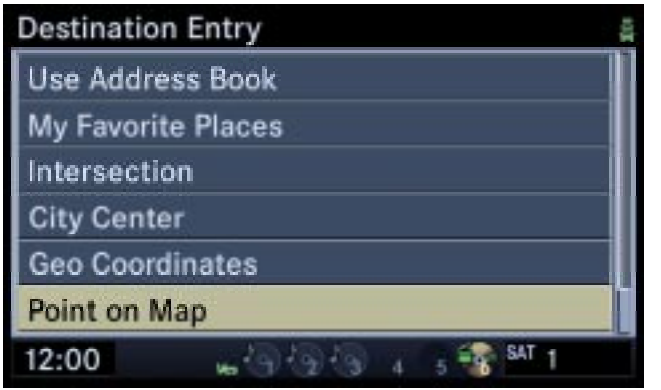

1. Select Point on Map in the Destination Entry screen.

2. Use the JOYSTICK in the CENTER CONTROL knob to navigate the center of the cross over the desired destination.

3. Press the JOYSTICK to select the destination.

4. Press GO in the Confirm Route To screen to start the route guidance.

Destination Input by Voice

Read the section Speech Dialogue System for details on the SDS.

1. Press the voice recognition button (VR). Wait for the beep and say NAVIGATION.

The navigation radio will respond, saying: “Navigation.” The navigation radio has switched to the navigation mode and is now ready to receive navigation-related voice commands. For this example, the default country is set to the US and the default state is set to Michigan.

2. Press the VR button, wait for the beep. Say INPUT STREET.

The radio will respond: “for Michigan. Please say the name of the street.”

3. Wait for the beep and say, LOLLY POP STREET (example).

The radio will respond: “Do you mean Lolly Pop Street?”

4. Wait for the beep and say YES.

The radio will respond: “Line one. Now, do you want to enter a city?”

5. Wait for the beep and say YES.

The radio will respond: “For Lolly Pop Street. The only city that could be found is Westland, Michigan. Do you want to use this city?”

6. Wait for the beep and say, YES.

The radio will respond: “City name has been accepted. Now, do you want to enter a house number?”

7. Wait for the beep and say NO.

The radio will respond: “Now, do you want to start route guidance?”

8. Wait for the beep and say YES.

The radio will start the route guidance to Lolly Pop Street, in Westland, Michigan.

While you drive towards the destination, you may press the VR button, wait for the beep and say TRAVEL INFO.

The radio will respond with your estimated time of arrival and the distance to the entered destination.

Guide Me Home

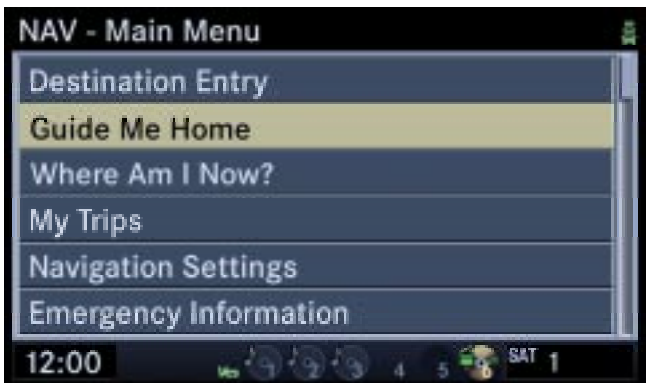

1. Select Guide Me Home in the NAV-Main Menu.

2. Select GO to confirm the route to the home address saved in the address book.

See the Getting Started and Address Book section in this manual for information on how to save, clear, or edit the home address.

Where Am I Now?

The Where Am I Now? menu displays location information for the current vehicle position.

Select SAVE LOCATION to save the current location in the Saved Locations memory.

Save the current location in the Favorite Places folder of the Saved Locations memory, in the Address Book, in the My Trips memory, or as the home address.

Select NEARBY POI to search for a POI in the surrounding area of your vehicle.

Emergency Information
Use this function to locate Emergency Points of Interest, e.g. Hospitals / Medical Facilities, Police Stations, Fire Departments, or Dealerships.

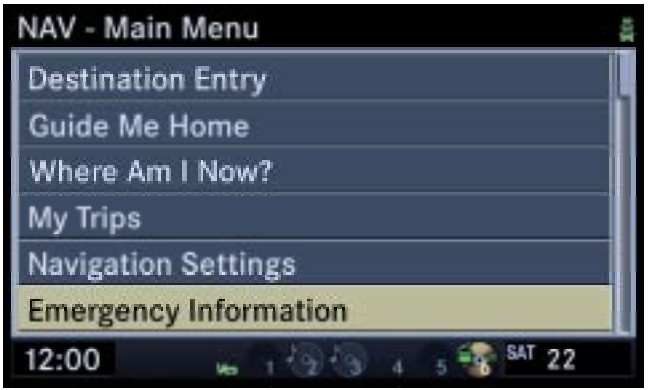

1. Select Emergency Information in the NAV - Main Menu.

2. Select Hospitals, Police Stations, Fire Departments or Dealerships.

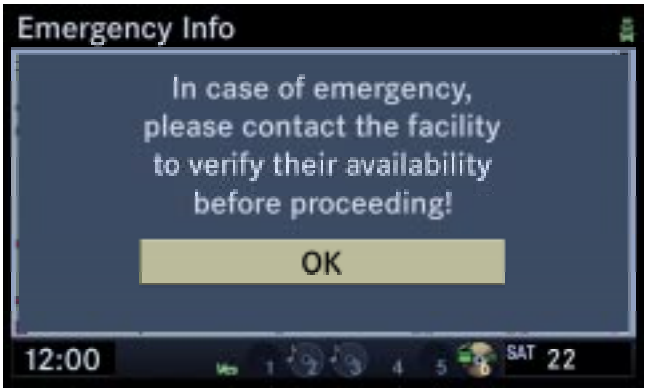

3. Read and confirm the disclaimer.

WARNING!

The distances displayed in the Emergency facility lists are air distances (as the crow flies). In some cases the road distance to the facility may vary. Actual road distances will be displayed after a specific destination is selected and the route planning is completed. In unverified areas the route selected may not be the quickest route to your destination!

Select CALL 911 to dial 911 with a cell phone connected via UConnect®. See the UConnect® section in this manual for more information on UConnect®.

WARNING!

The CALL 911 function is not available, if the phone is not connected via UConnect®.

Select Location Information to see currently available location information.

Select Location Map, to display a map of the current location.

Trails

The trail function is a feature that allows you to log and save a trail in non-digitized areas.

NOTE: It is recommended to start the trail into a non-digitized area from a digitized road.

1. Select My Saved Trails in the NAV-Main Menu.

2. Select Record New Trail to record a trail in an non-digitized map area.

The radio will switch to the map and the trail appears as a yellow line on the map screen while you drive along a route. Maneuver points (bread crumbs) are marked as yellow dots. The start point is marked with a green dot.

1. Press the NAV button to switch back to the NAV - Main Menu.

2. Select My Saved Trails in the NAV-Main Menu.

3. Select Stop Recording Trail to stop recording.

The end point is marked with a red dot.

- Select Discard Trail to discard the trail and stop the recording.
- Select Continue Recording to continue the recording.

4. Select Stop and Save Trail.

The trail will be named with time and date of the recording.

The trail recording is now saved in the Memory.

NOTE: You can save up to 12 trails. If the trail memory is full, you must discard one of the previous recorded trails in order to record a new trail.

Route Guidance to a Recorded Trail

1. Select My Saved Trails in the NAV-Main Menu.

2. Select the desired trail recording from the list.
3. Select GO to start the route guidance.

The guidance will route you to the start point of the trail (red dot).

Once you arrive at the destination (red dot, destination icon), the route guidance will end, and the trail will be displayed until you touch the Stop Trail button in the Navigation Main Menu.

Route Guidance

After starting route guidance, the system calculates the route and announces: “Follow the arrows on the display.” You will receive navigation recommendations by voice messages and screen displays.

Map Items

1. Press the MENU button.

2. Select Map Items.

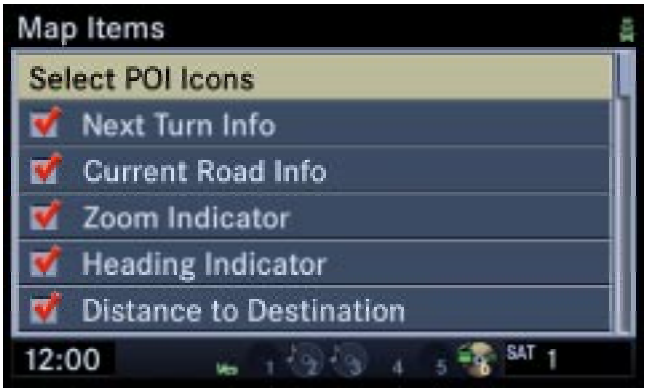

- Check-mark Next Turn Info to to show or hide the next turn button and the next turn information bar. (top of the map viewer screen)
- Check-mark Current Road Info to show or hide the NOW ON button and the current road information bar. (bottom of the map viewer screen)

- Check-mark Zoom Indicator to show or hide the zoom level indicator. (left side of the map viewer screen)
- Check-mark Heading Indicator to show or hide the heading indicator. (left side of the map viewer screen)
- Check-mark Distance to Destination to show or hide the distance indicator. (upper right corner of the map viewer screen)
- Check-mark Time to show or hide the time display (time Remaining and Time of Arrival).
- Check-mark Time Remaining to show the estimated time remaining until you reach your destination. (upper right corner of the map viewer screen)
- Check-mark Time of Arrival to show the estimated time of arrival at your destination. (upper right corner of the map viewer screen)

NOTE: It is not possible to show Time Remaining and Time of Arrival at the same time.

POI Icons on the Map

The navigation radio is able to display available point of interests on the map.

1. Press the MENU button.

2. Select POI Icons to show a list of point of interest icons.

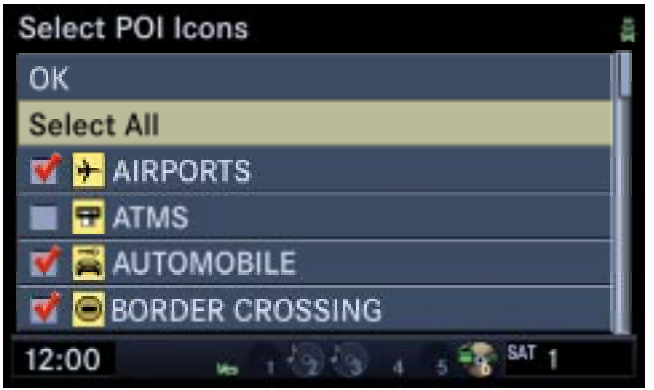

3. Check-mark the icon you would like to display on the map.

4. Select OK to confirm your settings.

Map Perspective

While the map is displayed on the screen.

1. Press the MENU button.

2. Select Map Perspective.

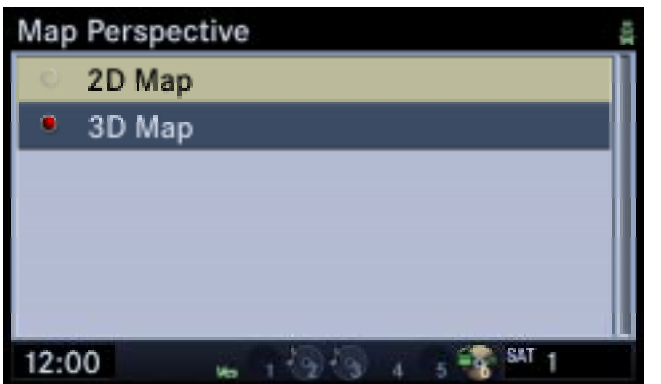

3. Select either 2D Map or 3D Map.

Map View

1. Press the MENU button.
2. Select Map View.

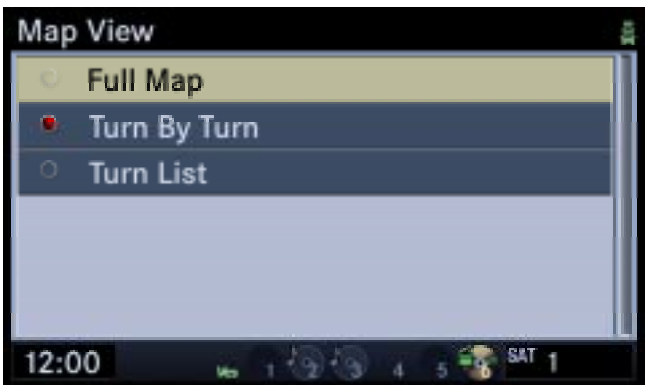

- Select Full Map to display a full map during route guidance.
- Select Turn by Turn to display turn arrows and intersection zooms on the right half of the screen.
- Select Turn List to display a list of upcoming turns on the right half of the screen.

NOTE: Check-mark Map View in the View Settings menu to enable the map view mode, where the navigation map or turn-by-turn navigation can be displayed on the right half of the radio screen (see View Settings for more information). You find the View Settings menu by pressing SETUP and selecting View Settings.

Map Heading

1. Press the MENU button.
2. Select Map Heading.

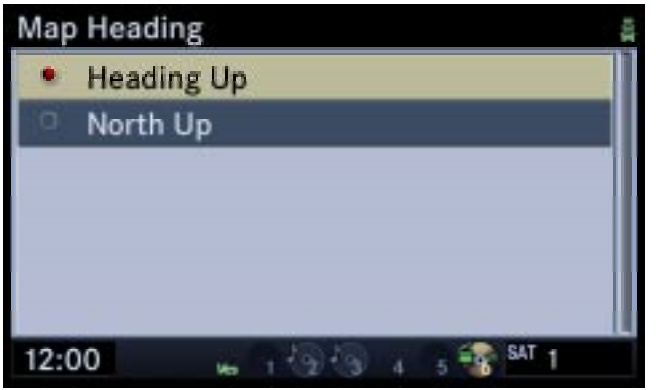

3. Select either Heading Up or North Up.

NOTE: Map orientation to the North is not available in 3D mode.

Repeat Navigation Announcement
Press the REPEAT PROMPT button to hear the current navigation announcement.

Automatic Re-Routing
If you miss a turn while navigating, the navigation radio will automatically adjust your route.

Navigation Options

NOTE: A route guidance must be active to select navigation options.

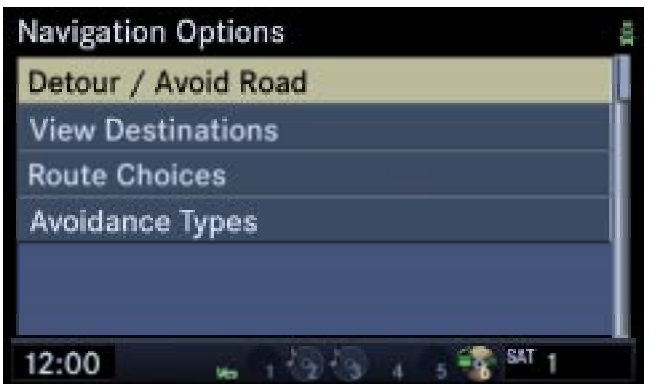

Detour

1. Press the MENU button.
2. Select Navigation Options.
3. Select Detour / Avoid Road.

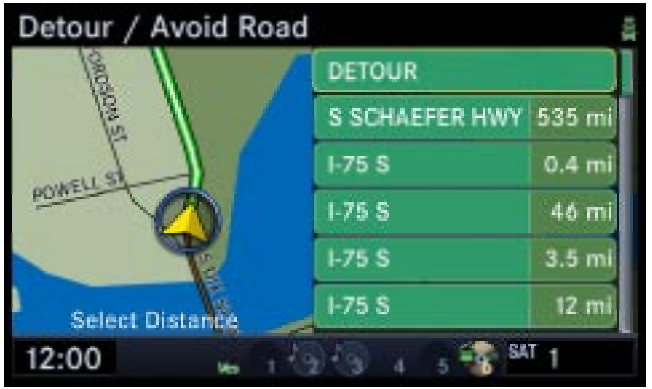

A list of streets utilized for the current route is displayed.

4. Select Detour.
5. Press the JOYSTICK.

6. Turn the CENTER CONTROL knob to enter the distance on the current route to be avoided.
7. Press the JOYSTICK again to confirm the detour.

Avoid Road

1. Press the MENU button.
2. Select Navigation Options.
3. Select Detour / Avoid Road.

A list of streets utilized for the current route is displayed.

4. Turn the CENTER CONTROL knob to select a road.
5. Press the JOYSTICK.

6. Select Yes and press the JOYSTICK again to confirm.

View Destinations

A route guidance must be active to select navigation options.

1. Press the MENU button.
2. Select Navigation Options.

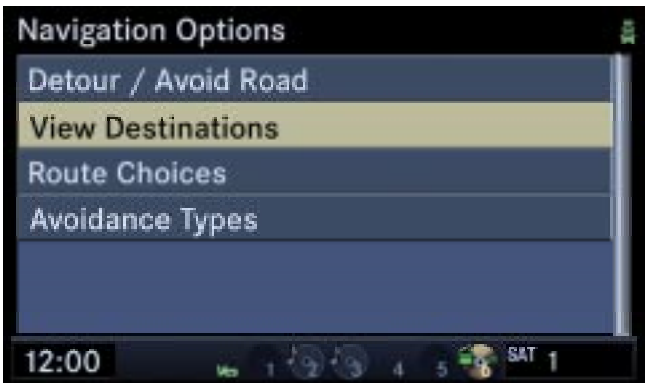

3. Select View Destinations to display a list off all active destinations.

Route Choices

A route guidance must be active to select navigation options.

1. Press the MENU button.
2. Select Navigation Options.

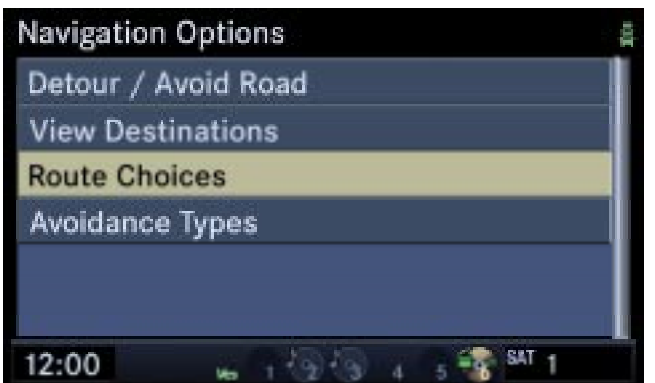

3. Select Route Choices.

An alternate route is displayed.

4. Either highlight Use Current Route or Use Alternative Route.

5. Press the JOYSTICK to confirm the route.

Avoidance Types

A route guidance must be active to select navigation options.

1. Press the MENU button.

2. Select Navigation Options.

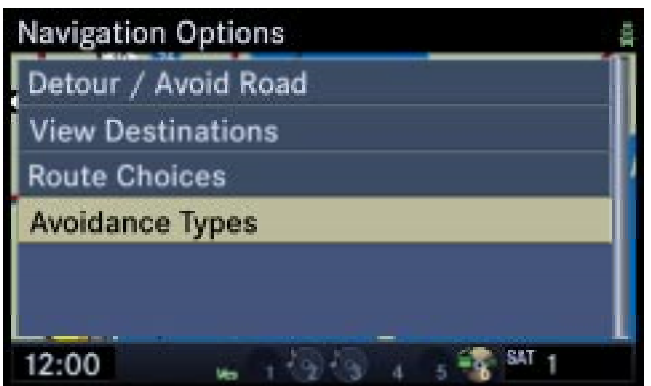

3. Select Avoidance Types.

4. Check-mark the desired types.
5. Press the NAV button to confirm the new settings.

NOTE: Avoiding freeways, toll roads, tunnels or ferries may result in very long routes.

Canceling Route Guidance

The current route guidance can be aborted at any time by pressing the STOP ROUTING button in the NAV -Main Menu.

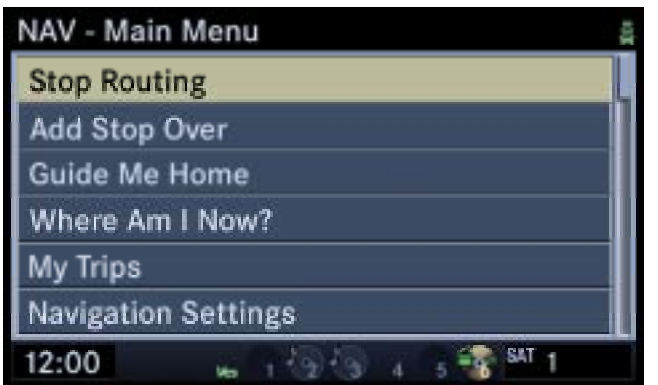

Unverified Navigation Database Area

The current route guidance can be aborted at any time by pressing the STOP ROUTING button in the NAV -Main Menu.

Route guidance in an unverified area is different from the guidance you receive in a detailed, verified area. When traveling in an unverified area, turn-by-turn guidance and voice prompts cannot be provided.

The navigation system will suggest a route highlighted in green. This is only a route suggestion. In an unverified map area, the navigation system is unaware of turning restrictions e.g. one way roads, or where turns are not permitted.

Notes on Route Guidance

During navigation you will receive voice recommendations to help guide you. The following explains some guidance messages you may receive.

WARNING!

Danger of Accident! DO NOT IGNORE TRAFFIC LAWS. If a driving recommendation contradicts the traffic laws, the laws ALWAYS take precedence!

"Make a U-turn if possible." - You are driving in the wrong direction and should turn around at the earliest legal opportunity.

"Follow the arrows on the display." - This display tells you that you are currently in an area, such as a parking lot, garage, etc., that is not contained on the digital street map. The arrow indicates the actual geographic direction to the destination.

"Please take a right in 300 feet." - The red arrow points in the direction you should turn. The dot indicates a maneuver point.

“Follow the road.” - You should continue driving on the current road for the distance shown.

Prepare to take a left” or “Keep left in one mile.” - Keep left does not mean to use HOV lanes or express lanes. You should note that there is an upcoming turn and prepare to make any lane changes needed to safely make the turn. As always, road safety must be observed when making a lane change.

“Take the second exit to the right.” - This means to pass the first exit after this announcement is given.

“Take the second turn on the right.” - This arrow shows you which exit you should take from a traffic circle.

NOTE: At intersections and traffic circles, only the ends of the roads to be passed are displayed.

“Keep right in half a mile.” - ”Keep right” means that the street will fork and you should follow the indicated direction.

“You have reached your destination.” - The specified destination has been reached and route guidance is terminated. The display will switch back after few seconds.

Navigation Settings

Select NAV Settings in the NAV-Main Menu to select the preferred measurement, set default routing method, view GPS format, and adjust guidance prompt volume.

Routing Method

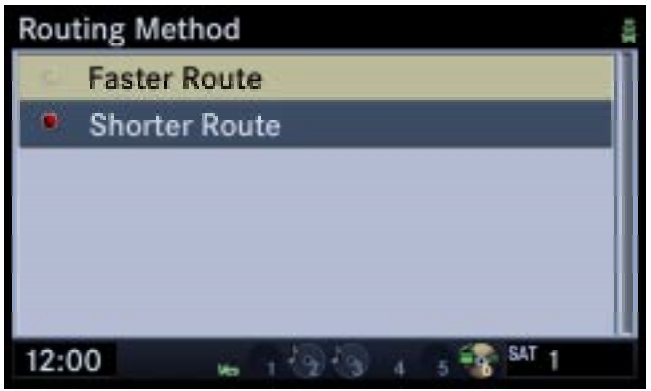

Mark or unmark route parameters and then press the BACK button to confirm the changes.

NOTE: Avoiding freeways, toll roads, tunnels or ferries may result in very long routes.

Avoidance Types

Mark or unmark route parameters and then press the BACK button to confirm the changes.

NOTE: Avoiding freeways, toll roads, tunnels or ferries may result in very long routes.

Guidance Settings

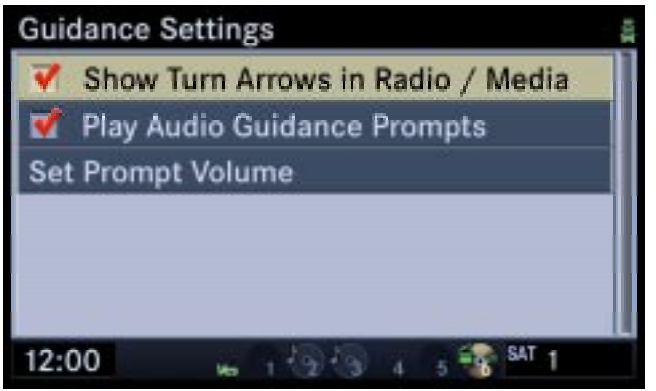

Check-mark Show Turn Arrows in Radio/Media to display map and routing information on the right half of the screen when in radio or media modes.

Uncheck Play Audio Guidance Prompts to mute the navigation announcements.

Select Set Prompt Volume to adjust the navigation announcement volume.

NOTE: The easiest way to change the navigation announcement volume is to press the REPEAT PROMPT button and then immediately to turn the VOLUME knob to adjust the NAV volume.

Units

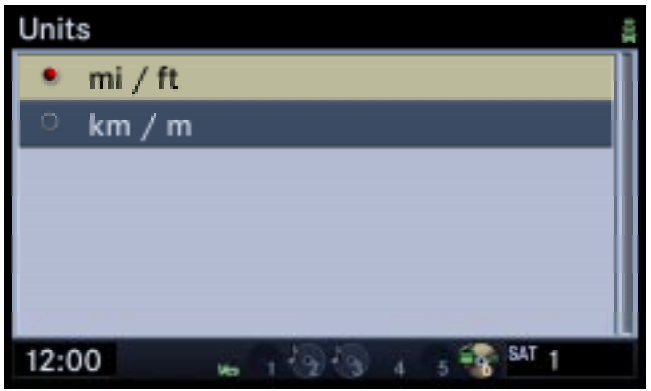

Select either mi/ft or km/m.

Press BACK to go back to the Navigation Settings menu.

GPS Display Format

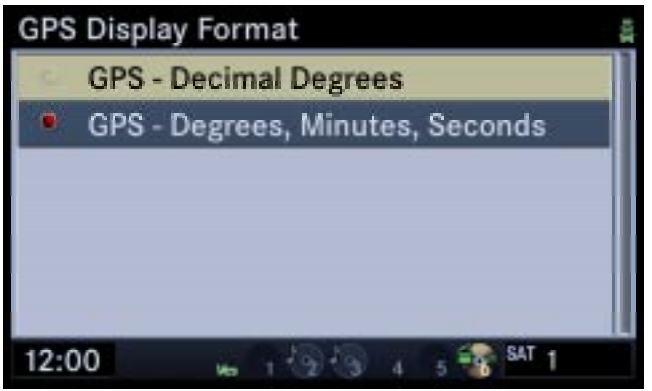

Select either Decimal Degrees or Degrees, Minutes, Seconds.

Press BACK to go back to the Navigation Settings menu.

Arrival Time Format

Select either Time Remaining or Time of Arrival.Press BACK to go back to the Navigation Settings menu.

GPS Information

1. Press the MENU button.
2. Select GPS Information.

The GPS Information menu displays Current Location, Coordinates in degrees, minutes and seconds, number of used satellites, a map of the calculated position, and elevation.

3. Press the JOYSTICK to toggle between Decimal Degrees and Degrees, Minutes, Seconds.

Map Viewer

Press the NAV button to switch to the navigation MAIN MENU.

Press the NAV button again to toggle between navigation MAIN MENU and navigation MAP.

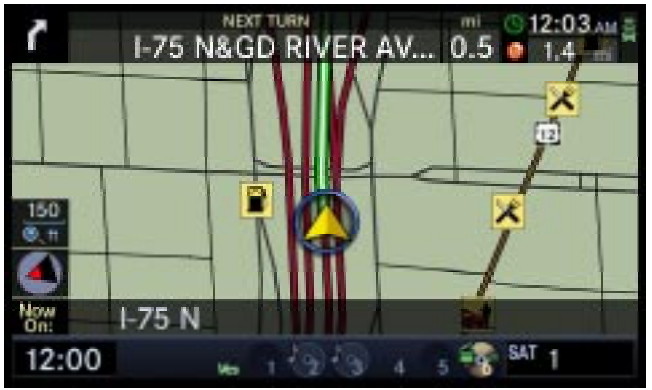

The tip of the arrow in the circle in the center shows your vehiclés position on the map. The indicators on the left show the map zoom factor, the map orientation, the display mode, and the current location button.

Map Zoom Level

Turn the CENTER CONTROL knob to change the zoom level.

Roads with lower functional classification are not shown in higher zoom levels. (E.g. residential streets, lightly-traveled county roads.)

Route Lines

The navigation radio displays recorded trail lines as yellow lines on top of the road map. (See Record New Trail section for more details.)

Suggested routes are displayed as bright green lines on top of the road map, when the route guidance is active.

NOTE: Suggested routes (green) have a higher priority than recorded trails and may overwrite recorded trail lines.

Stop Over Destinations

NOTE: Route guidance must be active in order to enter a stop over destination.

1. Go to the NAV-Main Menu.

2. Select the Add Stop Over.

3. Enter a destination.

STOP OVER is displayed in the Insert Stop Over menu.

4. Turn the CENTER CONTROL knob to position the new destination in the active destinations list.

5. Press the JOYSTICK to confirm the position in the list.

6. Press the JOYSTICK again to confirm the Stop Over.

NOTE: Once you reach a destination, the system will automatically guide you to the next destination on the list.

Trip Planner

If you are traveling to multiple destinations, the My Trip function will allow you to calculate and save the route to each destination.

Plan a New Trip

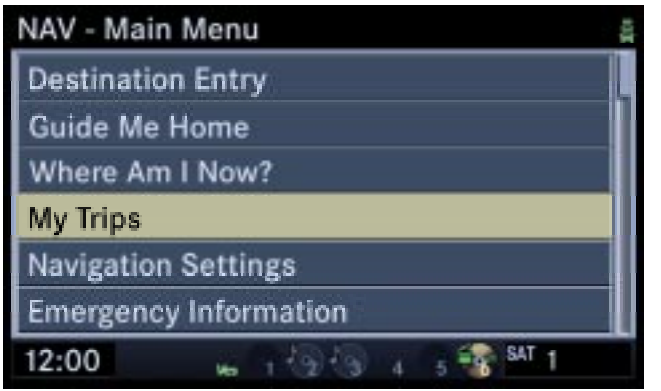

1. Select My Trips in the NAV - Main Menu.

2. Select PLAN NEW TRIP to plan a new trip.

3. Enter a name for the trip.
4. Highlight CONTINUE to confirm the trip name.
5. Highlight YES.
6. Press the JOYSTICK to confirm.

7. Enter a destination (see section Destination Input in this manual).

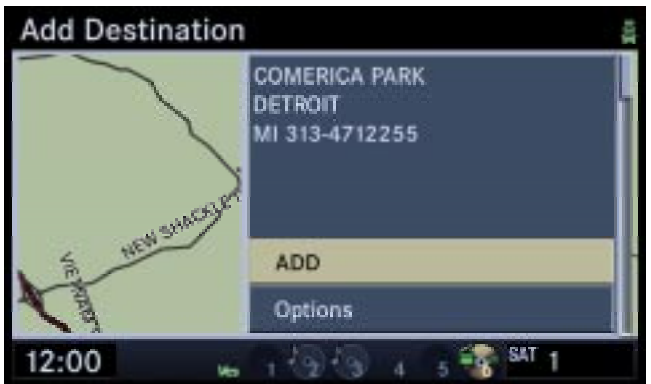

8. Highlight ADD in the Add Destination screen.

9. Press the JOYSTICK to Insert the destination into the destinations list.

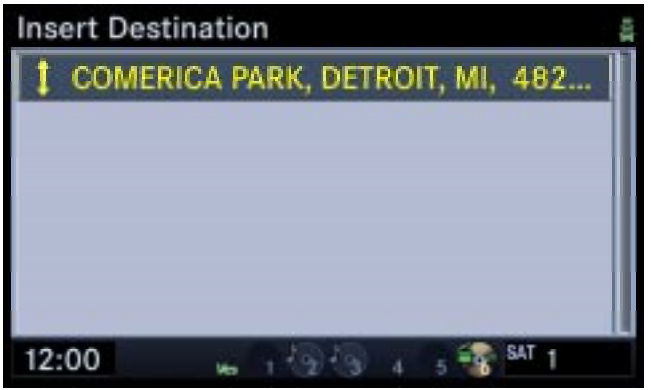

10. Turn the CENTER CONTROL knob to position the entry in the list.

11. Press the JOYSTICK to confirm.

The trip was now added to the My Trips list.

NOTE: You may add up to 12 trips to the list. The display shows the My Trips is FULL message in the status line, if all 12 trips are used.

Add a Destination to a Trip

1. Highlight the trip.
2. Press the JOYSTICK.

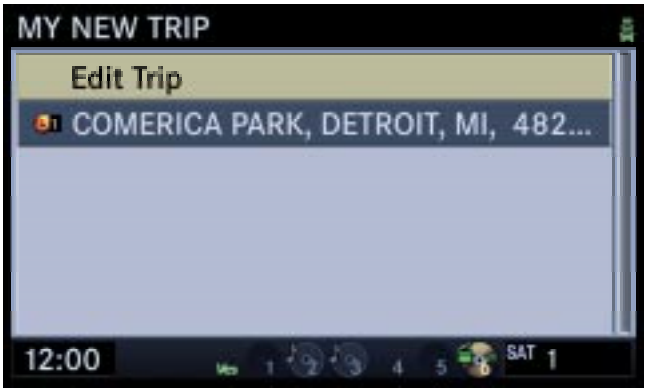

3. Highlight Edit Trip.
4. Press the JOYSTICK.

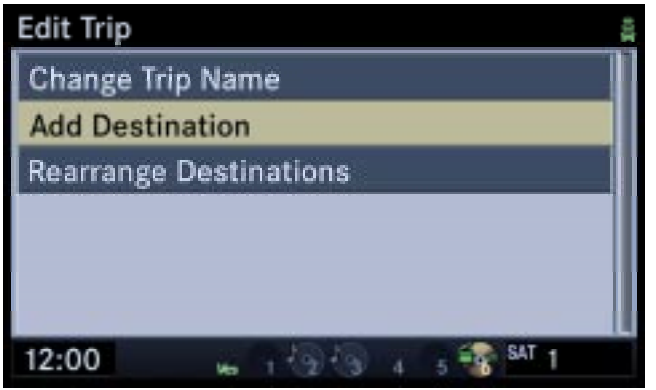

5. Select Add Destination to add a destination to the trip.

NOTE: You can add up to 8 destinations to a trip. The display shows the Itinerary is FULL message in the status line, if all 8 destinations are used.

Change a Trip Name

1. Highlight the trip.
2. Press the JOYSTICK.
3. Highlight Edit Trip.
4. Press the JOYSTICK.
5. Select Change Trip Name to edit the trip name.

Rearrange Destinations in a Trip

1. Highlight the trip.
2. Press the JOYSTICK.
3. Highlight Edit Trip.
4. Press the JOYSTICK.

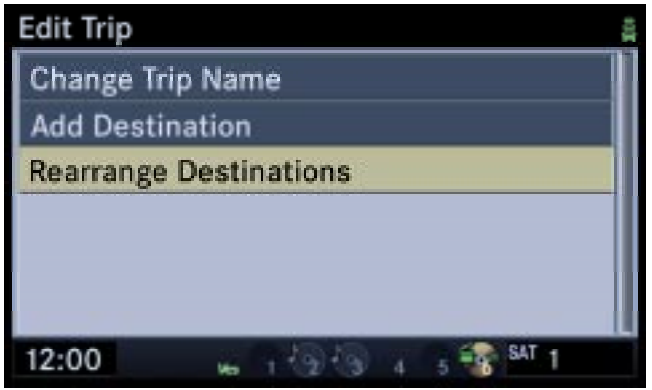

5. Select Rearrange Destinations to rearrange the order of the destinations within a trip.

6. Select the entry you would like to move and press the JOYSTICK.

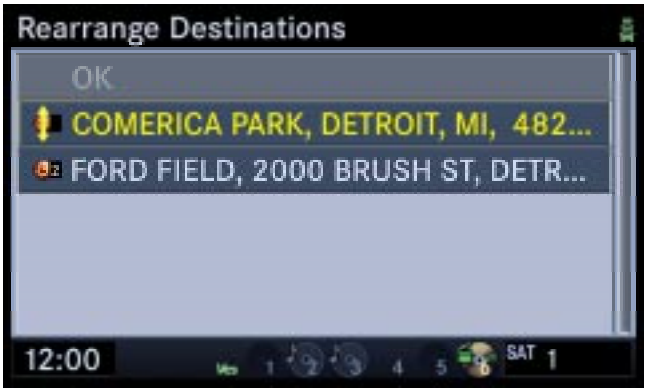

7. Turn the CENTER CONTROL knob to reposition the entry in the list.

8. Press the JOYSTICK to confirm the position in the list.

9. Select OK to confirm the changes.

Start a Trip

1. Highlight the trip.
2. Press the JOYSTICK.
3. Highlight the destination you would like to start to.
4. Press the JOYSTICK.
5. Highlight GO in the confirmation screen.
6. Press the JOYSTICK to start the route guidance.

Realtime Traffic by SIRIUS Satellite Radio

The Sirius Realtime Traffic feature is a specific application of the radio receiver used for receiving real-time traffic and weather information.

The navigation radio receives traffic messages with the satellite radio receiver. You must have a subscription with Sirius to receive this service. Refer to the Re-Subscribe to Sirius Satellite Radio chapter in the Radio section of this manual.

Display Traffic Messages

1. Press the MENU button.
2. Select Sirius Traffic to display the available traffic messages.

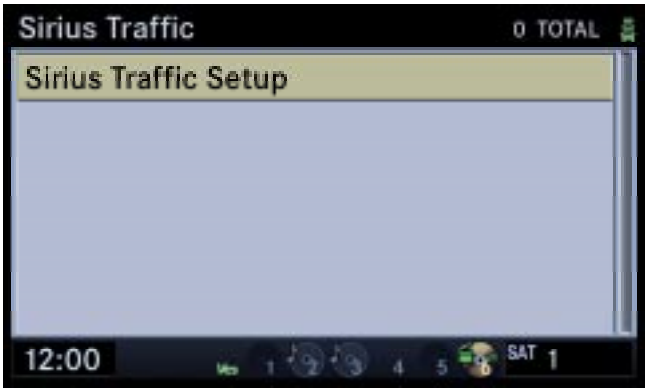

The traffic message screen displays traffic messages in a list form. Data related to traffic flows, incidents, weather, etc., are gathered from traffic monitoring systems, emergency services, motorists' calls, etc., and are processed at a central traffic information center. The information is transferred to the Realtime Traffic information service provider, who then generates the Realtime Traffic messages that are sent by Sirius to the vehicle.

3. Select a message to view details.

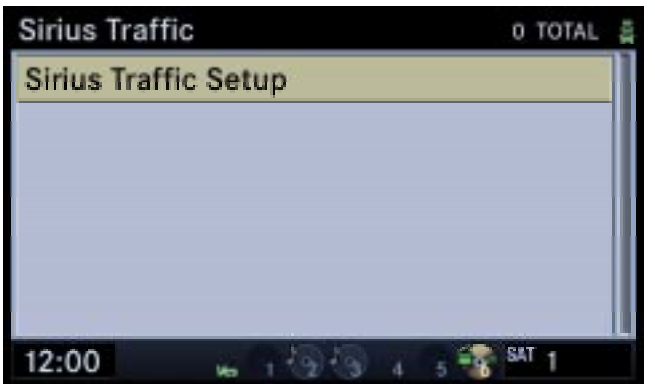

4. Turn the CENTER CONTROL knob to step through the list of available messages.

5. Press the JOYSTICK to see the location of a message on a map.

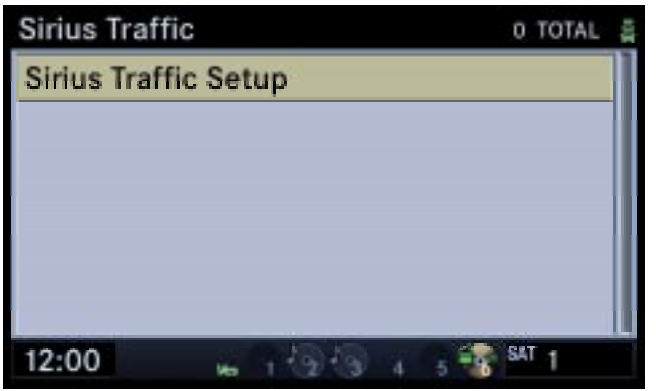

6. Press the JOYSTICK again to go back to the message details.

Switching Sirius Realtime Traffic On or Off

1. Press the MENU button.
2. Select Sirius Traffic.
3. Select Sirius Traffic Setup.

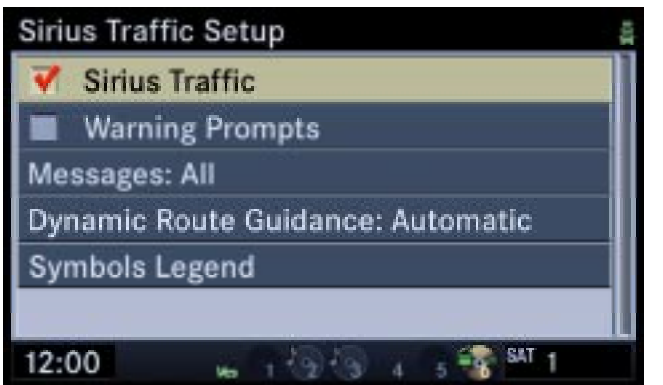

4. Check-mark Sirius Traffic to turn the traffic receiver on.

5. Uncheck Sirius Traffic to turn the traffic receiver off.

The Realtime Traffic icon in the upper right corner of the screen indicates that the Realtime Traffic receiver is on.

Warning Prompts
Check-mark Warning Prompts to enable warning prompts.

View All Messages
You can view either all received messages for the area you have a subscription, or only the messages on your route within the same area.

Dynamic Route Guidance
Ongoing route guidance may change your route, based upon the traffic information received. The AUTO mode will will make these changes automatically; the MANUAL mode will ask for each traffic event.

Symbols Legend
The navigation radio can display icons on the map when the Sirius Traffic function is active.

NOTE: It can take between 15 and 30 minutes for a message to reach the system.

Select LEGEND in the Sirius Traffic Setup menu to review available icons and their meaning.

Sirius Realtime Traffic Flow
Traffic flow information is fed to SIRIUS Traffic by roadway sensors monitored and maintained by local departments of transportation. The availability of these feeds varies city by city and is limited by road infrastructure and maintenance.

- A transparent green line indicates flowing traffic with speeds faster than 45 mph.
- A transparent yellow line indicates an average driving speed between 10 and 45 mph.

- A transparent red line indicates an average driving speed between 0 and 10 mph.

Address Book

Overview

The address book provides a way to organize and store frequently used addresses.

The address book is organized in folders. To get to the address book

1. Press the MENU button.
2. Select My Files
3. Select My Address Book

The HOME folder
Contains only your home address.

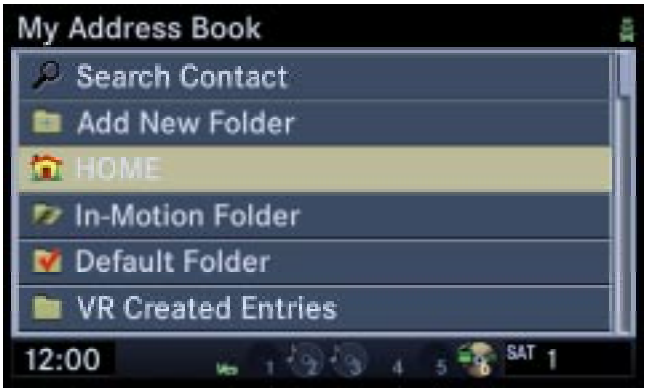

Touch this folder button to edit the home address. You may route to this address by touching the Guide Me Home button in the NAV Main Menu.

The In-Motion Folder
Contains links to entries in the other folders.

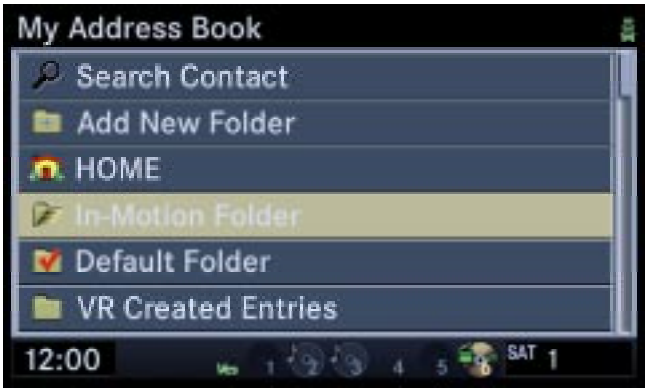

The In-Motion Folder is the only folder accessible while the vehicle is in motion. This is a safety feature that limits the availability of certain navigation tasks while the vehicle is traveling. Touch the In-Motion Folder button and add links to existing entries in the Default Folder, VR Created Entries folder, or any of the personalized folders.

The Default Folder

Contains contacts which are available whenever the vehicle is not in motion.

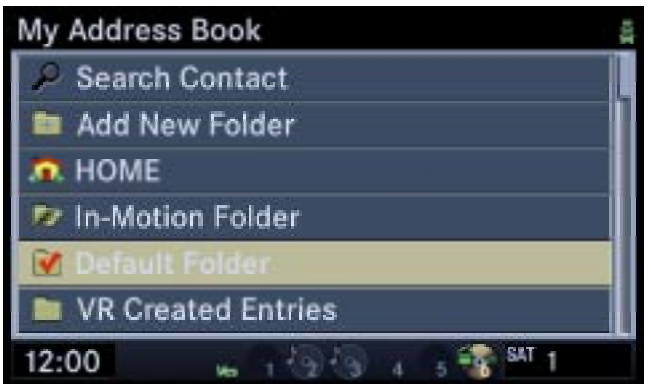

Touch the Default Folder button to add, edit, delete, and route to your contacts.

The VR Created Entries folder

Contains contacts which were created with the help of the speech dialog system.

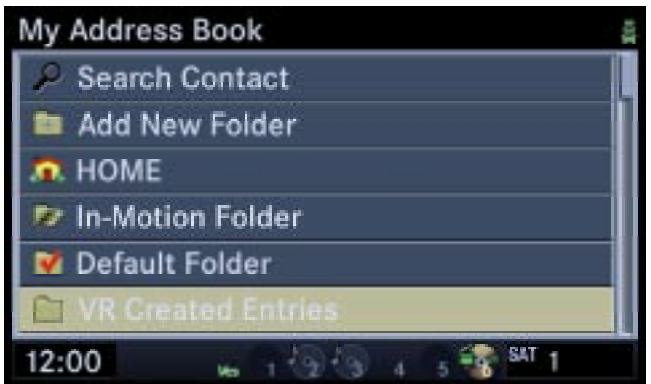

Touch the VR Created Entries folder button to add, edit, delete, and route to your contacts.

Add a Folder

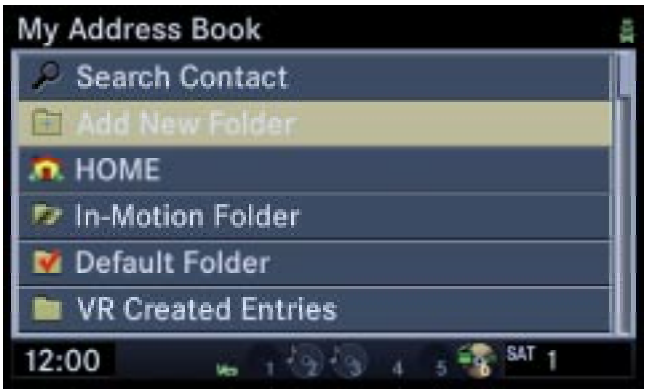

Select Add New Folder to add a personalized folder. After the new folder is named, the folder will be available in the address book.

Entering/Editing/Deleting an Address

1. Press the MENU button to access one of the menus.

2. Select My Files for the Manage My Files screen.

3. Select My Address Book to get to the Address Book menu.

The Address Book screen appears.

4. To select an address from the Default folder, select the Default Folder function.

To select an address from another folder, select one of the folder buttons.

5. Select Add Contact or Edit Folder to add a new contact.

6. Select Delete All Folder Contents to delete all contacts in this folder.

7. Select Rename this Folder to edit the folder name.

You may now create a new contact or copy a contact from another folder.

8. Select Add Contact From Another Folder to add a contact from another folder.

9. Select Create New Contact to go to the next screen.

10. Enter a name for your new contact.

11. Select CONTINUE to confirm the name.

You may now:

- Add a voice tag for the voice recognition.
- Move the contact to another folder.
- Delete the contact.

12. Select Edit Contact to add more information to the entry.

You may now:

- Change the contact name.
- Add an address.
- Clear the address.
- Add a phone number, or
- Clear the phone number.

Search a Contact in the Address Book

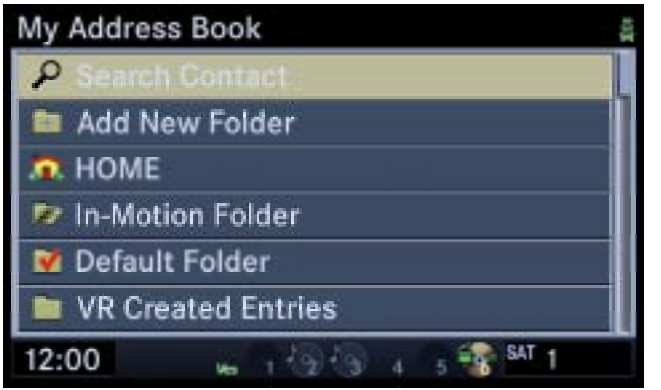

1. Select Search Contact in the Address Book menu.
2. Enter a contact name.
3. Press either LIST or select CONTINUE.
4. Select a contact from the results list.

5. Once the contact information is displayed, you may Route To the contacts address, or Call the contacts phone number, if a valid phone was entered, and a telephone is connected to the navigation radio.

SYSTEM INFORMATION

Press the SETUP button and select System Information to access the system information.

Data Backup and Updates

User Data Backup

Visit http://www.chrysler.com/mygig/ for information on how to backup or transfer your user data, such as address book entries, music files, etc., before returning or changing to a vehicle with a compatible navigation radio (e.g., end of lease).

Software and Database Updates

Visit http://www.chrysler.com/mygig/ for information on available software and database updates.

Updates are available for the navigation radio software, the Gracenote® music recognition technology database, and the navigation database.

Please read the specific instructions on the update discs before installing the updates.

Contact your local Chrysler dealership, if you need help or more information about the available updates.

TROUBLESHOOTING

Radio

Q.: I cannot find my favorite radio station that I was always able to receive before. What can I do?

A.: Select MUSIC TYPE while in radio mode. Select CLEAR to disable all PTY filters, and try to SEEK for your station.

Disc

Q.: The radio does not display the information for the disc I inserted. How do I access this information

A.: The radio will search the internal Gracenote® music recognition technology database on the hard drive for the inserted disc. If the database is out of date, or the database does not contain the particular disc, the information cannot be displayed. Contact a Chrysler dealership or website http://www.chrysler.com/mygig/ for available updates.

HDD

Q.: The radio is playing songs from the HDD, it jumps to the first song in the list. Why does it do that?

A.: After the radio is done copying or ripping music to the HDD, it needs to rebuild the current playlist. After the playlist was rebuild, the radio starts to play the first song in the current playlist.

Navigation

Q.: I entered the wrong home address. How can I change it?

A.: Go to Destination Input, then Saved Locations. There you will find the Home Address. Press EDIT to edit the entry.

Navigation Map

Q.: Why are there transparent colored lines parallel to the freeway on the map?

A.: The lines are color coded Sirius Realtime Traffic Flow information. A transparent green line indicates flowing traffic with speeds faster than 45 mph. A transparent yellow line indicates an average driving speed between 10 and 45 mph. A transparent red line indicates an average driving speed between 0 and 10 mph.

Voice Recognition

Q.: The voice recognition does not understand what I say. What can I do to make this work?

A.: If the navigation radio has trouble recognizing your voice, you should press the MENU button, press System Setup, and then press the Voice Recognition button to access the Voice Recognition menu. Touch the Start Voice Training button and follow the spoken instructions.

UConnect®

Q.: I am in a gas station and my cell phone is ringing, I try to answer the call, but I do not hear anything. How do i get the call?

A.: Your phone is still connected with UConnect® via Bluetooth®, the navigation radio expects you to be in the car. You need to temporarily disconnect from Bluetooth® to answer the call. Refer to the user's manual of your Bluetooth®device.

GLOSSARY OF TERMS

AS	Autostore
CD	Compact Disc
CDC	Compact Disc Changer
CDDB	A technology company founded in 1995 as CDDB, Inc. The company has been re-named to Gracenote, Inc. The technology has been renamed to the Gracenote media recog-nition service.
DVD	Digital Versatile Disc
DVDC	Digital Versatile Disc Changer
FIX	A position determined from terrestrial, electronic, or astro-nomical data.
GMD	Gracenote Media Database, Gracenote Media Recognition Service (www.gracenote.com)

GPS	Global Positioning System
GMT	Greenwich Mean Time
HDD	Hard-Disk Drive
HFM	Hands-Free Module
CCK	CENTER CENTER CONTROL knob
MFS	Multi Functional Steering Wheel
MP3 MPEG-1 Audio Layer-3.	Compression scheme used to transfer audio files via the Internet and store in portable players and digital audio servers.
M4A	The.M4A format is actually the audio layer of (non-video) MPEG 4 movies.
M4P	The.M4P format is an audio file purchased from Apple's Music Store (iTunes) and is protected by a Digital Rights Management scheme.
NAV	Navigation
POS	Position
PTY	Program type (radio)
RDBS	Radio Data Broadcasting System
SAT	Satellite Radio
SAT-V	Satellite Backseat TV™
SDS	Speech Dialog System
VES™	Video Entertainment System™
WMA	Windows Media Audio Format

INSTALLATION OF RADIO TRANSMITTING EQUIPMENT

Special design considerations are incorporated into this vehicle's electronic system to provide immunity to radio frequency signals. Mobile two-way radios and telephone equipment must be installed properly by trained personnel. The following must be observed during installation.

The positive power connection should be made directly to the battery and fused as close to the battery as possible. The negative power connection should be made to body sheet metal adjacent to the negative battery connection. This connection should not be fused.

Antennas for two-way radios should be mounted on the roof or the rear area of the vehicle. Care should be used in mounting antennas with magnet bases. Magnets may affect the accuracy or operation of the compass on vehicles so equipped.

The antenna cable should be as short as practical and routed away from the vehicle wiring when possible. Use only fully shielded coaxial cable.

Carefully match the antenna and cable to the radio to ensure a low Standing Wave Ratio (SWR).

Mobile radio equipment with output power greater than normal may require special precautions.

All installations should be checked for possible interference between the communications equipment and the vehicle's electronic systems.

05145326AA

First Edition
Printed in U.S.A.

Chrysler LLC